

ROOMTEC

Handrail For Outdoor Instruction Manual














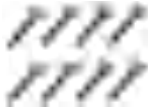




Note: If you encounter any problems with the installation, missing or replacement parts, please Contact **ROOMTEC**. Please also tell us your “**ORDER ID**,” we will solve the issue for you as soon as possible.

TEL: **(800)209.3199** (MON-FRI 9:00am-5:00pm Eastern Time)
Email: hello@room-tec.com

PARTS LIST

- Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure a completed product as designed.
- Do not tighten all the screws until each part is properly assembled.

Number	Name	Parts	Quantity
A1	Handrail tube		1PCS
A2	Connector of the handrail tube		2PCS
A3	Column		2PCS
A4	Connector of the column		2PCS
A5	The connector tube		1PCS
A6	Cover-up		2PCS
A7	Handrail tube cover		1PCS


Number	Name	Parts	Quantity
B1	Screw of the connector		8PCS
B2	Self-tapping screw		8PCS
B3	Expansion screw		8PCS
B4	Drill		1PCS
B5	Self-tapping screw		8PCS
B6	Double open end wrench		1PCS
B7	Allen key		1PCS
B8	Hexagon drill bit		1PCS
B9	Self-tapping screw bit suitable for B5		1PCS

HANDRAIL ASSEMBLY

STEP 1: Install the handrail tube cover and connector.

- Install the A7(handrail tube cover) on both ends of the A1(handrail tube).
- Install the A4(connector of the column) with B1(screws), and the up and down directions of the two connectors are opposite.

Install the A2(connector of the handrail tube) with B1(screws), and the left and right directions of the two connectors are the same.

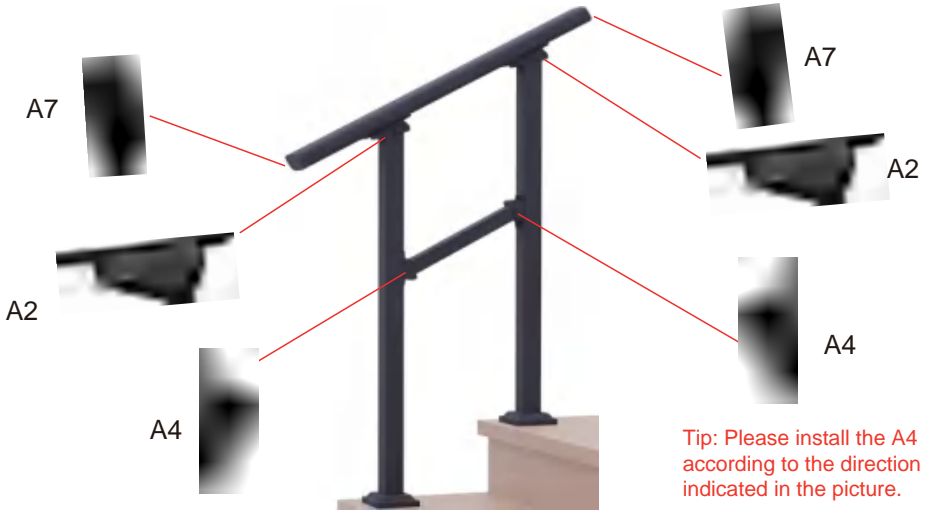

STEP 2: Make adjustments.

Insert the two sides of the A5(The connector tube) into the A4(Connector of the column) respectively.

Insert the A3(column) into the A2(connector of the handrail tube). Put the whole parts on the steps to be installed, and make adjustments.

After adjusting to the appropriate position, please mark 8 hole locations and you need an electric drill (not included in the product) to drive the self-tapping B2 screws into the connector 2 side holes to fix the angle (it cannot be adjusted after locking the B2 screws).




STEP 3:

Fix the A3(columns) on the ground,According to different ground conditions, select suitable accessories and punch holes.

Cement/Brick Floors: Drill holes with the provided B4(drill) ,Fix the columns with expansion B3(screws).

Wooden floor: Fix the A3(columns) with B5(self-tapping screws).

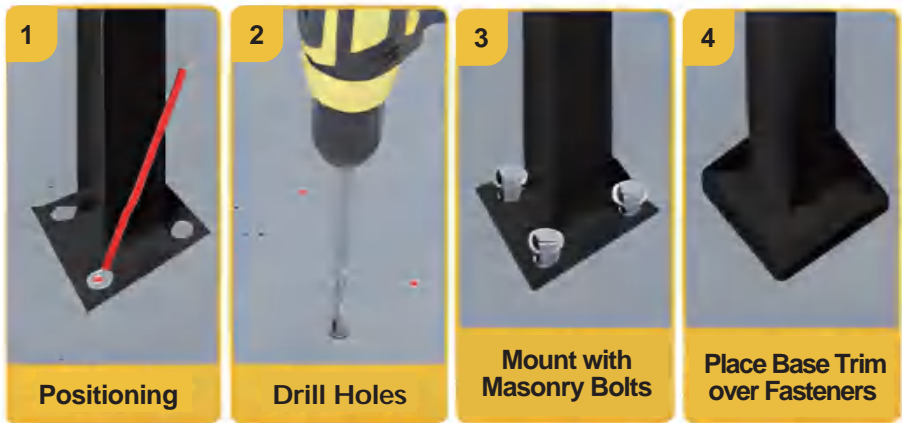

STEP 4:

Fasten the cover-up A6 to the bottom of the column to cover the punched hole.



AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products,
We guarantee that the product has undergone strict quality inspection
and meticulous packaging. If you encounter any issue regarding either
shipping or the product, please feel free to contact us at any time.
We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please avoid harsh, corrosive and abrasive cleaners.
- Keep dry and avoid damp environments.

*Customer Service: (800)209.3199(MON-FRI 9:00am-5:00pm
Eastern Time) or contact@room-tec.com*

Address: 3005 Breckinridge Blvd, Suite 200, Duluth, GA 30096

If you have any questions or concerns please feel free to contact us.
We're committed to providing our customers with the quality service.