




FORMOSA

INSTALLATION GUIDE

FVN3124ACA

CONTENTS:


Mirror	FMR3120ACA	PAGE 2
Cabinet	FCB3124ACA	PAGE 3
Sink	FCT2024WH-CMB	PAGE 3




FVN3124ACA FORMOSA INSTALLATION GUIDE




FVN3124ACA
Vanity Front

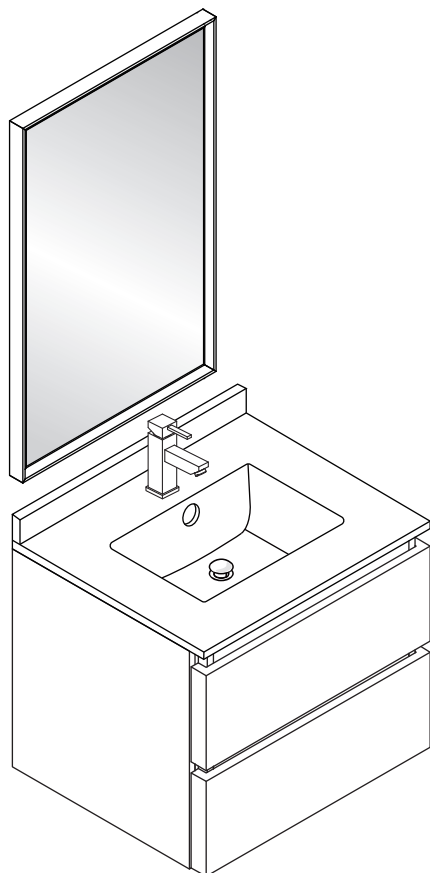


FMR3120ACA
Mirror Front

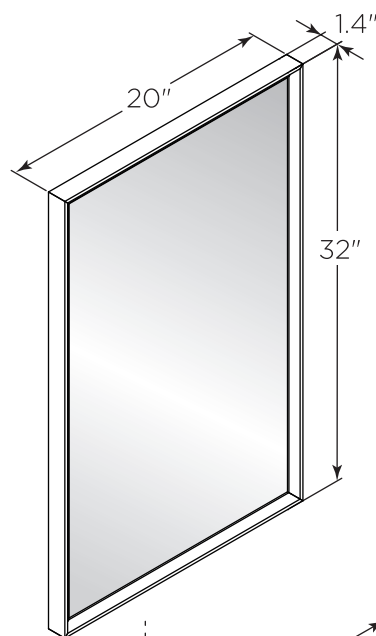


FCT2024WH-CMB
Counter Top Front

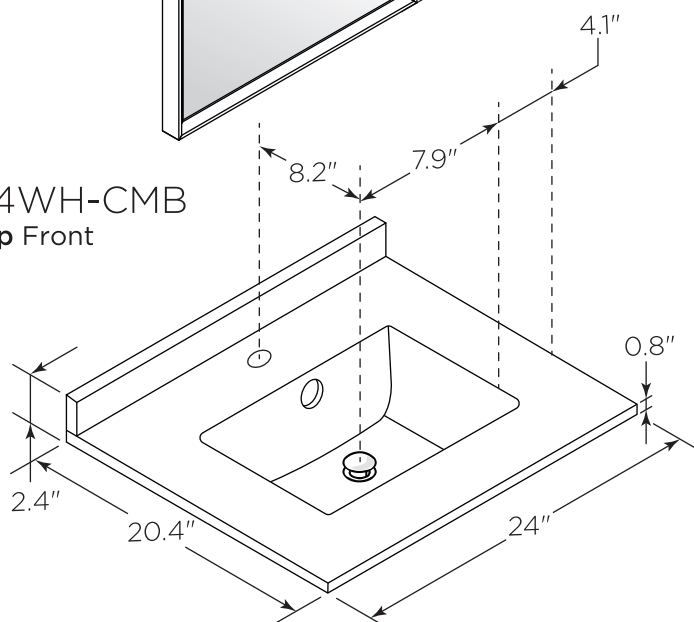


FCB3124ACA
Cabinet Front

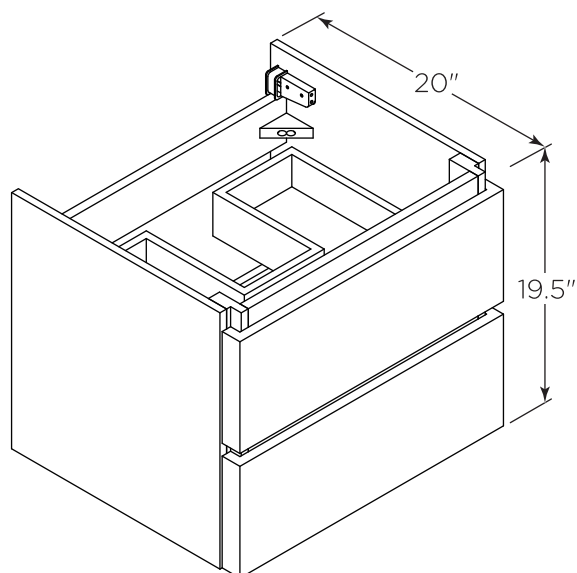

FCB3124ACA
Cabinet Back

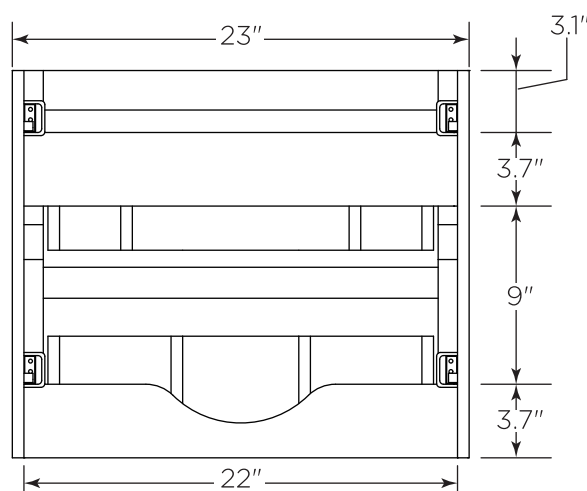


NOTE: All dimensions & specifications are approximate and subject to change without notice.



FVN3124ACA FORMOSA INSTALLATION GUIDE




TOOLS FOR ASSEMBLY

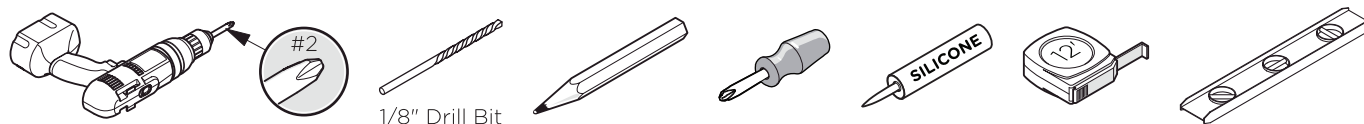


MIRROR INSTALLATION

- 1** Measure distance between the holes and mark it on the wall using a level.

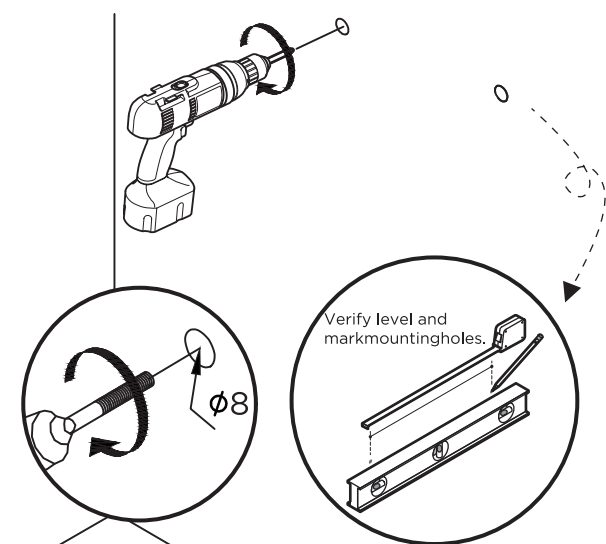



- 2** Press the anchors into the holes.

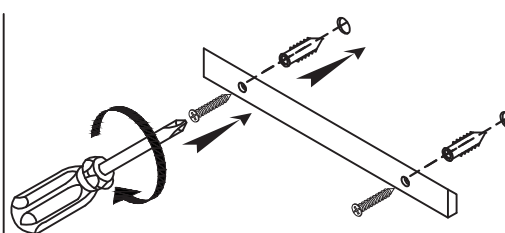

IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

- 3** Hang mirror on the screws.

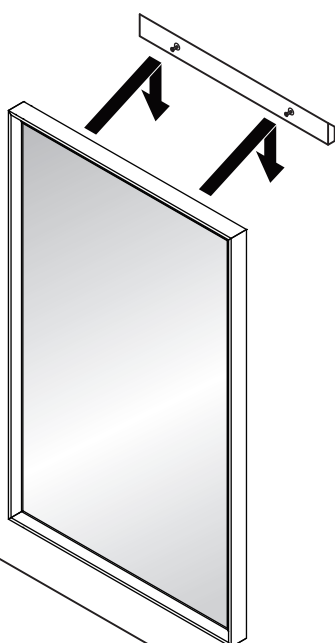




FVN3124ACA FORMOSA INSTALLATION GUIDE




CABINET AND SINK INSTALLATION

- 1** Mark anchor mounting hole locations on wall as shown. Drill holes in the finished wall as required.


IMPORTANT: Consult an expert for the proper screws/bolts to use when attaching to various constructions. Screws provided do not attach to all wall construction types. Anchors are not required if brackets are installed in stud.

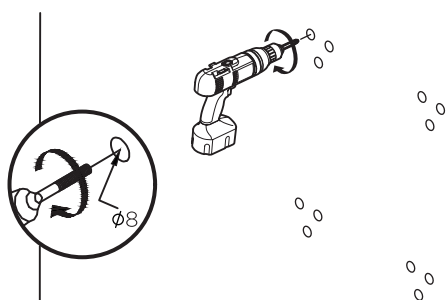


- 2** Attach cabinet to the wall with the screws. Insert the anchor(1) into the holes and secure the wall bracket(2) with the screws(3).

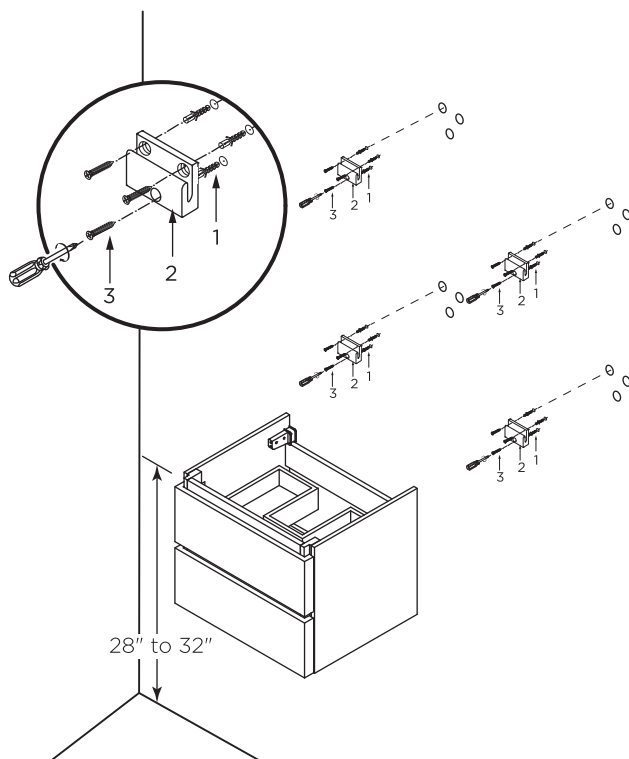


- 3** Install sink.

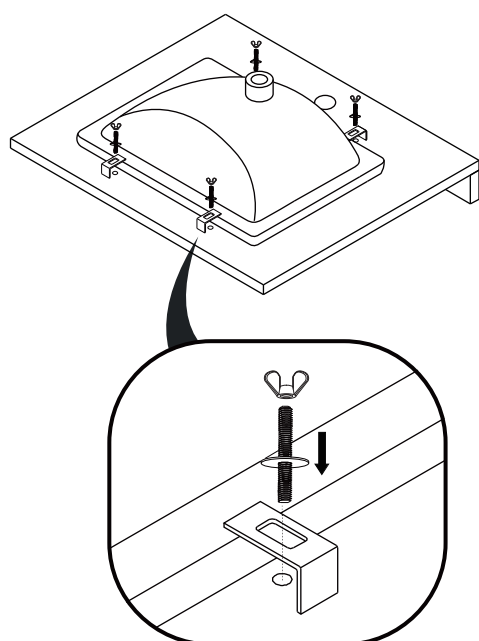

- 4** Apply a bead of silicone on the top of the cabinet (F) and place sink (E) on the cabinet.

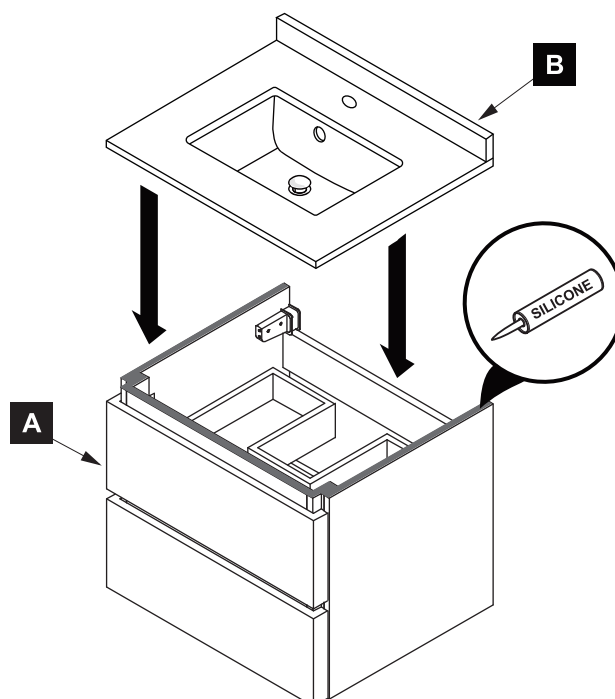







FVN3124ACA FORMOSA INSTALLATION GUIDE








DRAWER REMOVAL & INSTALLATION

REMOVAL

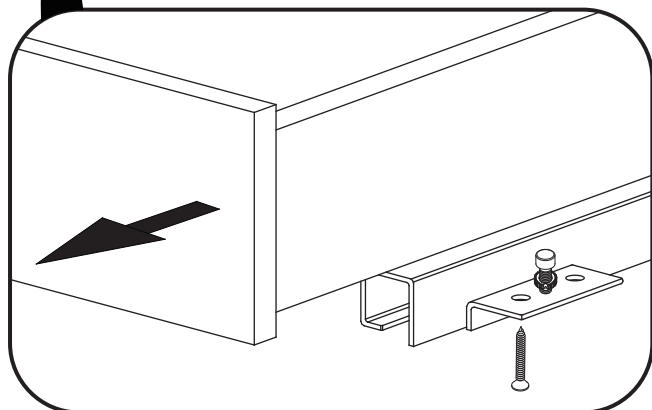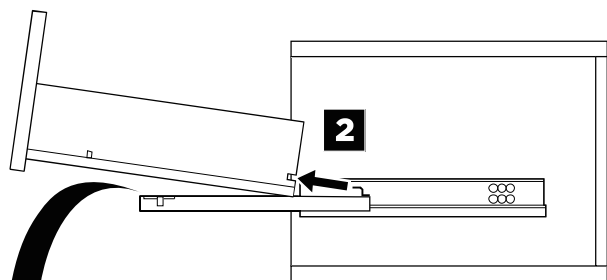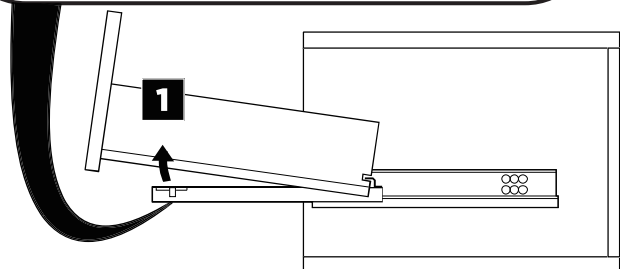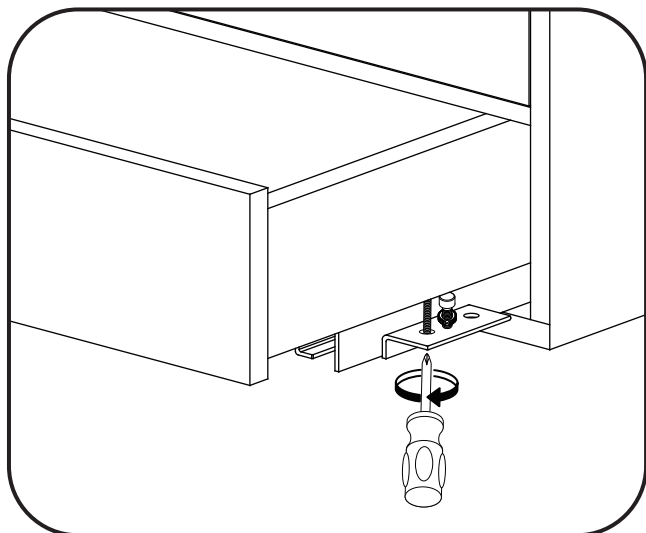

INSTALLATION

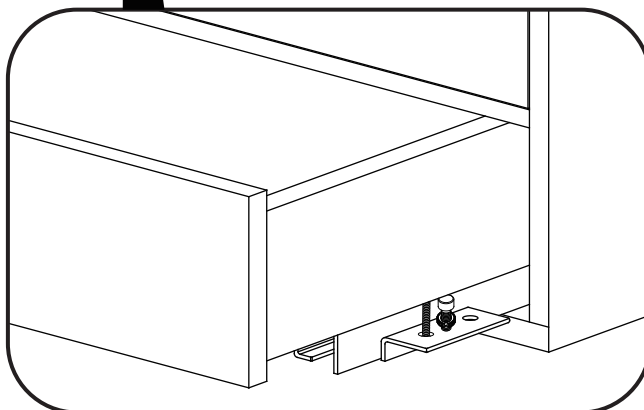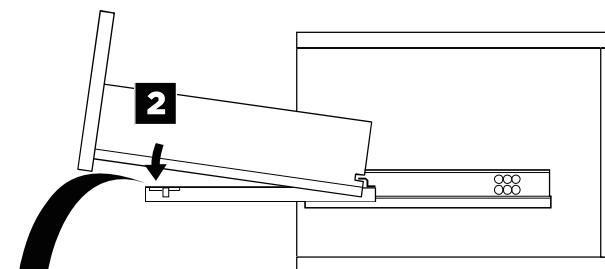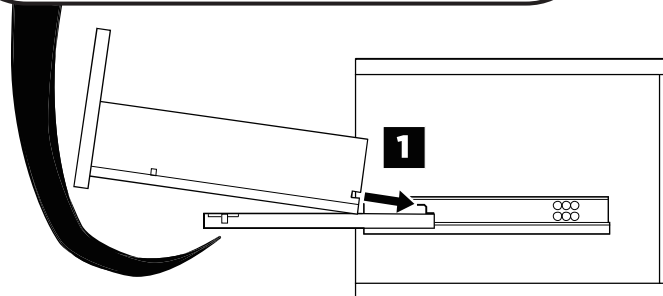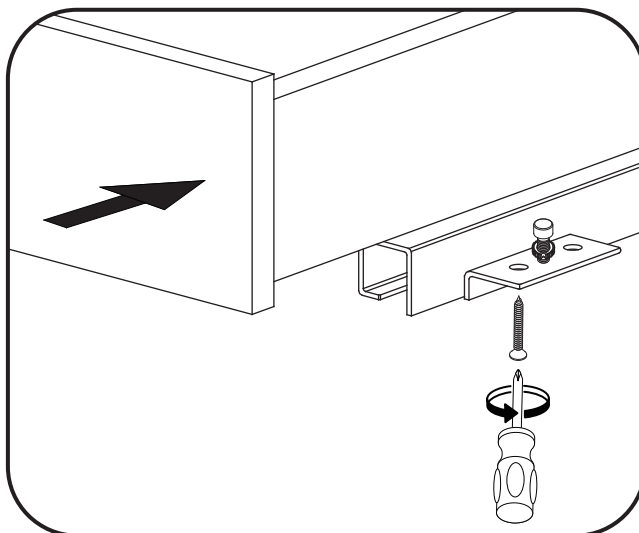




P-TRAP AND POP-UP INSTALLATION INSTRUCTIONS


NOTE:

Your item may appear slightly different from the illustration.

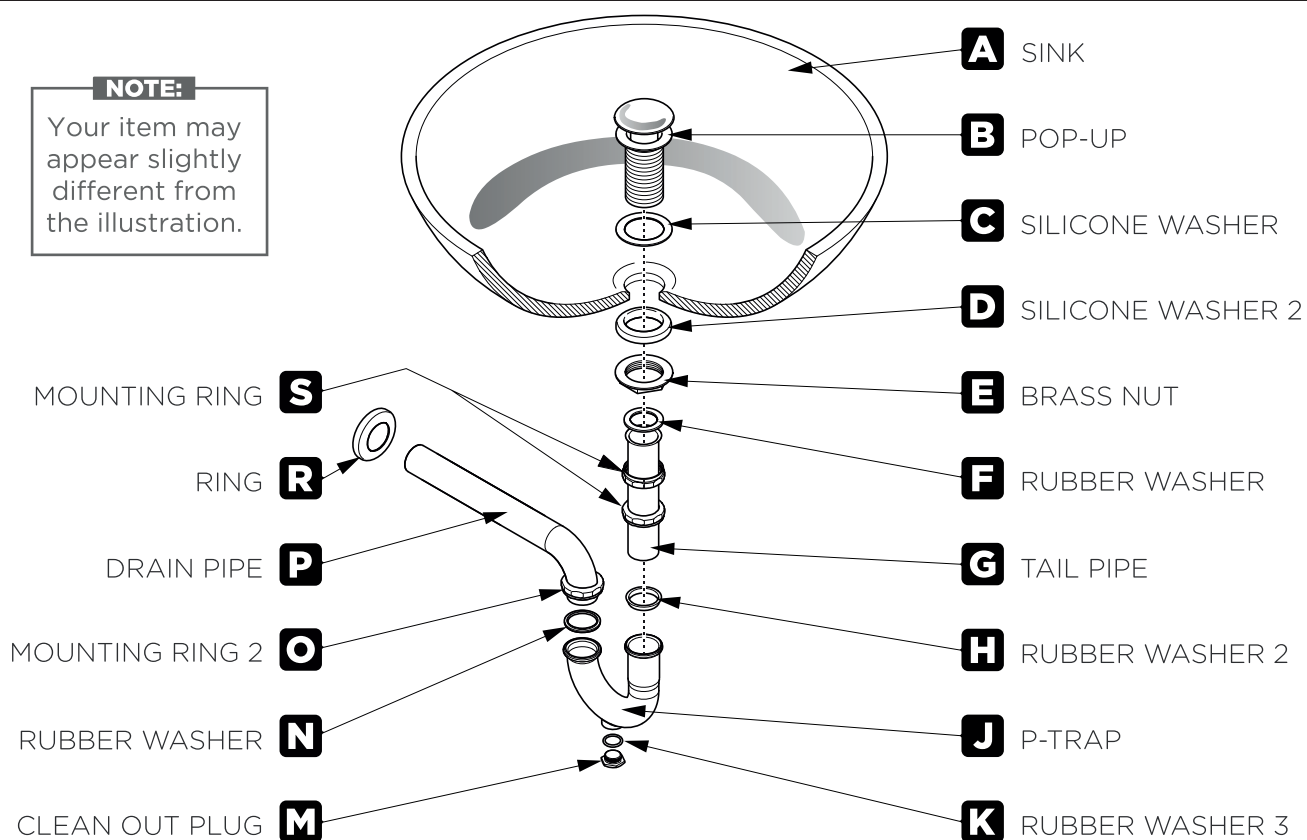


POP-UP INSTALLATION INSTRUCTIONS


FOR SINKS WITHOUT OVERFLOW

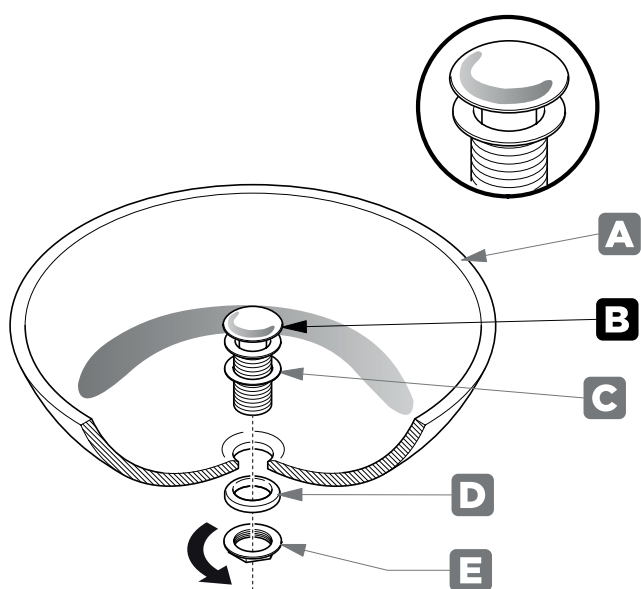


OR

FOR SINKS WITH OVERFLOW

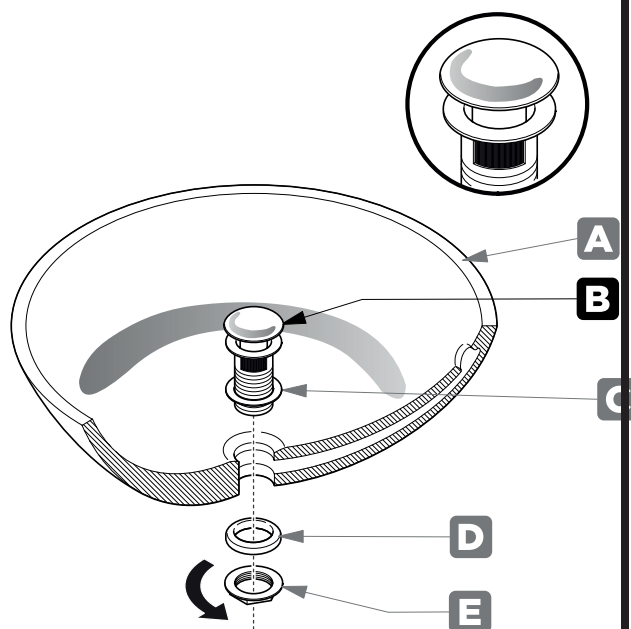

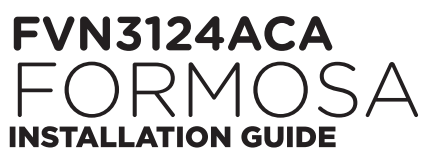

1 Install tail pipe (G)

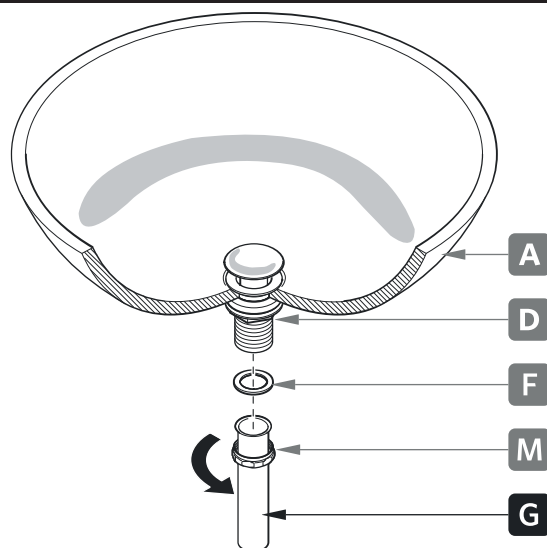

2 Install p-trap (J)

