


# TV STAND

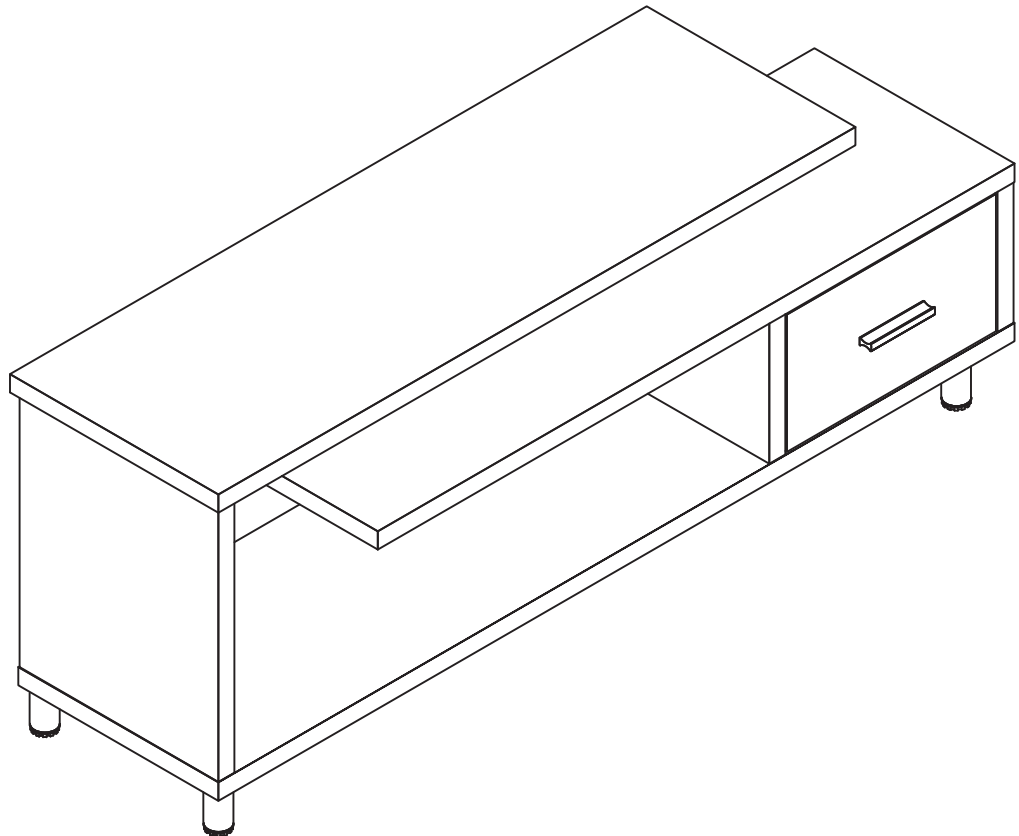

## ASSEMBLY INSTRUCTIONS

---

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---
















Please do not return to the store

Broken or missing parts?

Need help with assembly?

If you have any questions just call or email us.





## Hardware List

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Cam bolt ( 16pcs )	Cam lock ( 16pcs )	Wood dowel (22pcs)	Blot( 16pcs )	Long screw (4pcs)
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Large short screw (4pcs)	Large screw (6pcs)	Door handle (1pc)	Handle screw (2pcs)	Foot (4pcs)
<b>K</b> 	<b>L</b> 	<b>M</b> 		
Sticker (2pcs)	Glue (1pc)	Allen wrench (1pc)		


## Panel List

1	2	3	4	
Top panel (1pc)	Middle panel (1pc)	Side panel (1pc)	Rear panel (1pc)	
5	6	7	8	
Left divider Panel (1pc)	Right divider Panel (1pc)	Rear divider Panel (1pc)	Bottom panel (1pc)	
9	10	11	12	13
Drawer door (1pc)	Left drawer panel (1pc)	Right drawer panel (1pc)	Drawer rear panel (1pc)	Drawer bottom panel (1pc)

## Assembling the unit with camlocks and wood dowels.

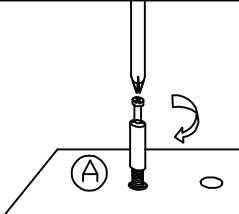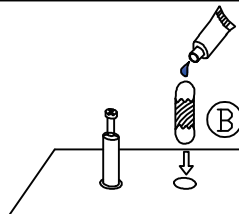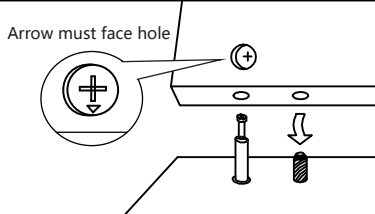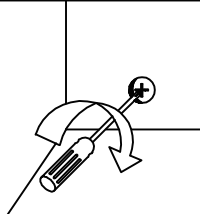
			
<p>Gently screw cam bolt into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

## Exploded Views

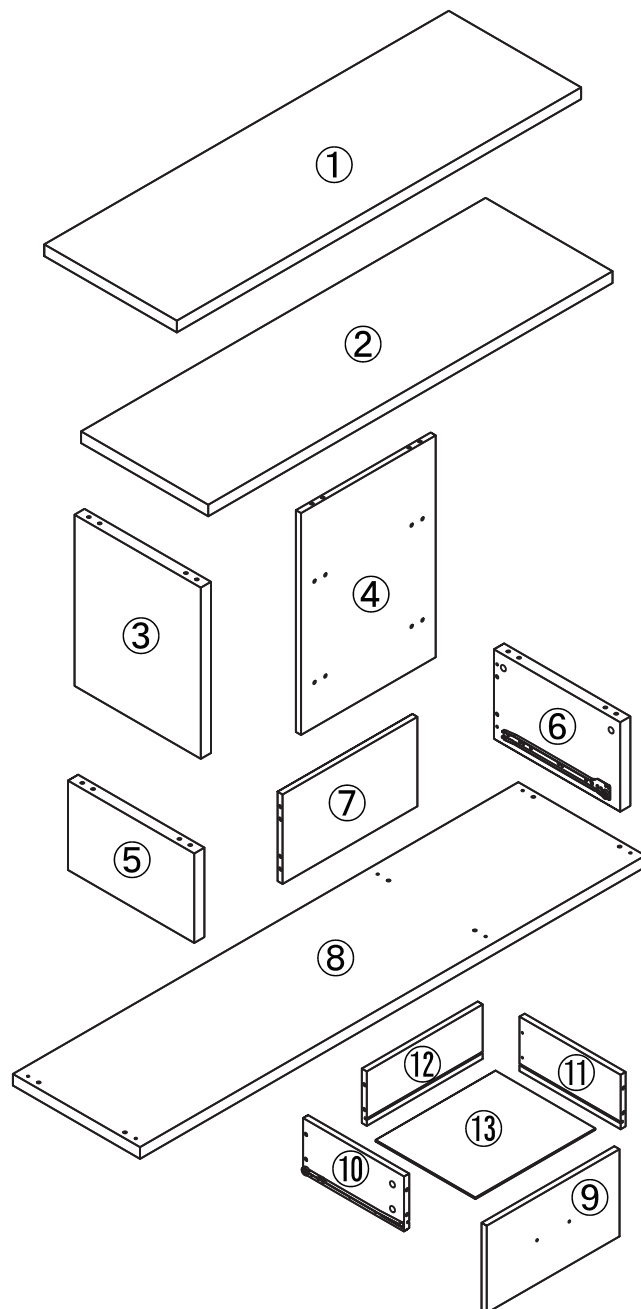

## Step 1


1. Screw cambolts (A) and insert wooden dowels (C) into left divider panel ⑤ and right divider panel ⑥.
2. Insert camlocks (B) into rear divider panel ⑦.
3. Connect left and right divider panels ⑤ & ⑥ to the rear divider panel ⑦.
4. Gently tighten camlocks.

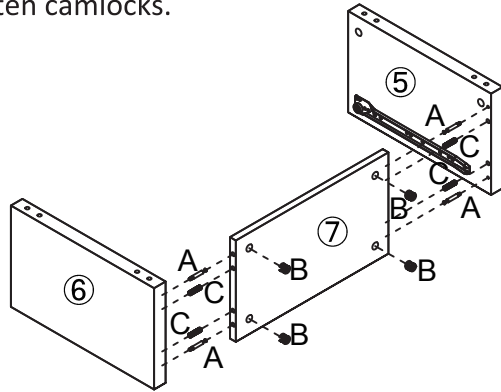

x4




x4



x1




x4

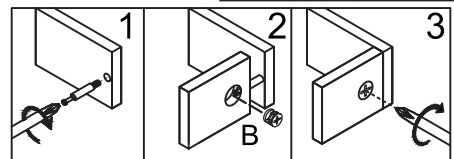

## Step 2

1. Insert wooden dowels (C) into bottom panel ⑧.
2. Connect the unit to the bottom panel ⑧ as shown using large screws (G) and allen wrench (M).

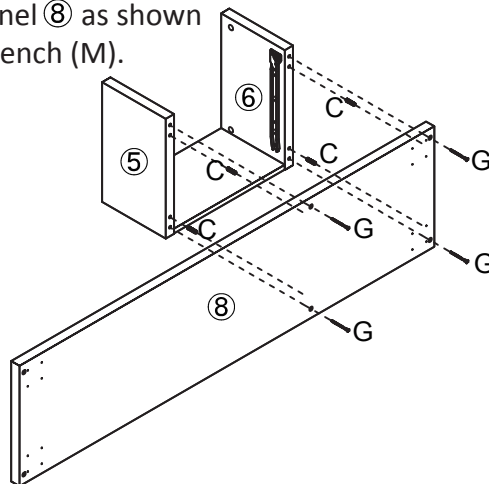

x4



x1




x4



x1

## Step 3

1. Screw cambolts (A) and insert wooden dowels (C) into middle panel ②.
2. Insert camlocks (B) into left divider panel ⑤ and right divider panel ⑥.
3. Connect middle panel ② to the unit as shown.
4. Gently tighten camlocks.

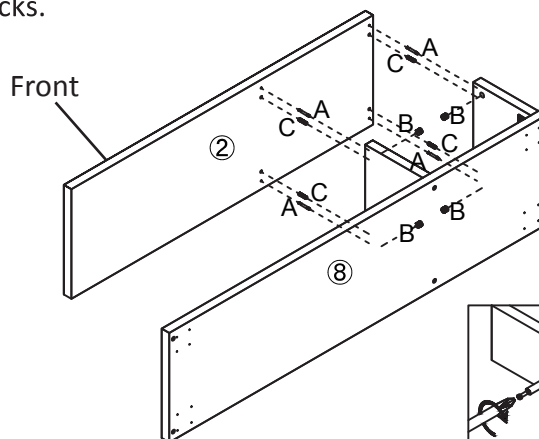

x4




x4



x1





x4

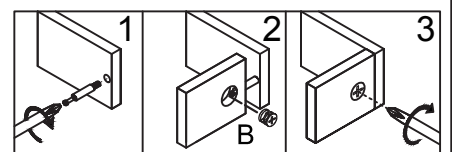

## Step 4





\* Turn unit over. \*

1. Insert wooden dowels (C) into rear panel ④ and bottom panel ⑧ as shown.
2. Connect the rear panel ④ to unit as shown using large short screws (F) and allen wrench (M).
3. Connect side panel ③ to bottom panel ⑧ as shown using large screws (G) and allen wrench (M).

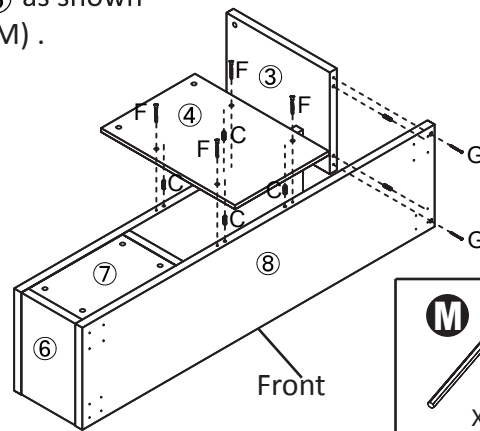

## Step 5






1. Connect the feet (J) to the assembly using Bolts (D) and allen wrench (M).

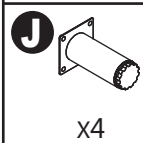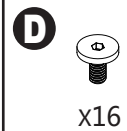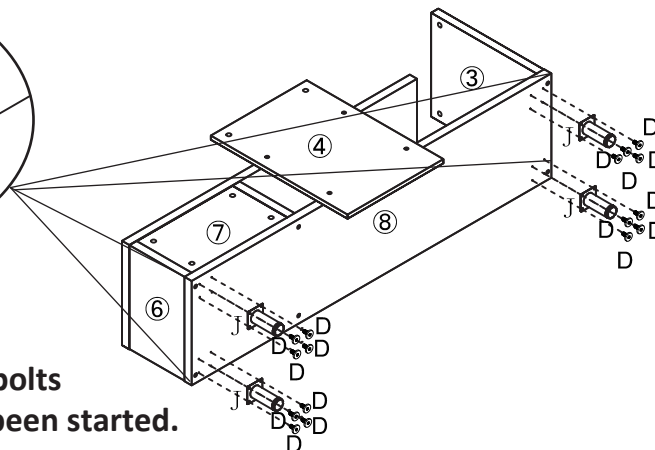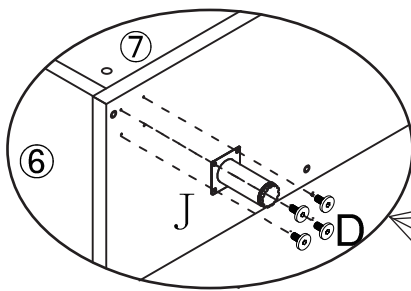

**\* Do not fully tighten allen bolts (D) until four Bolts have been started.**


## Step 6

1. Screw cambolts (A) and insert wooden dowels (C) into top panel ①.
2. Insert camlocks (B) into side panel ③ and rear panel ④.
3. Connect top panel ① to the assembly as shown.
4. Gently tighten camlocks.

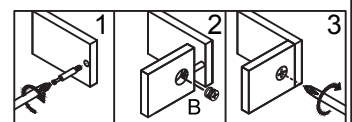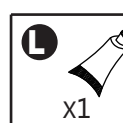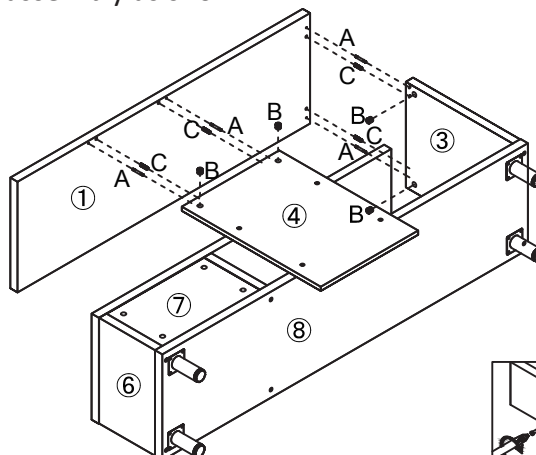


## Step 7

1. Connect left drawer panel (10) and right drawer panel (11) to rear drawer panel (12) as shown using long screw (E) .

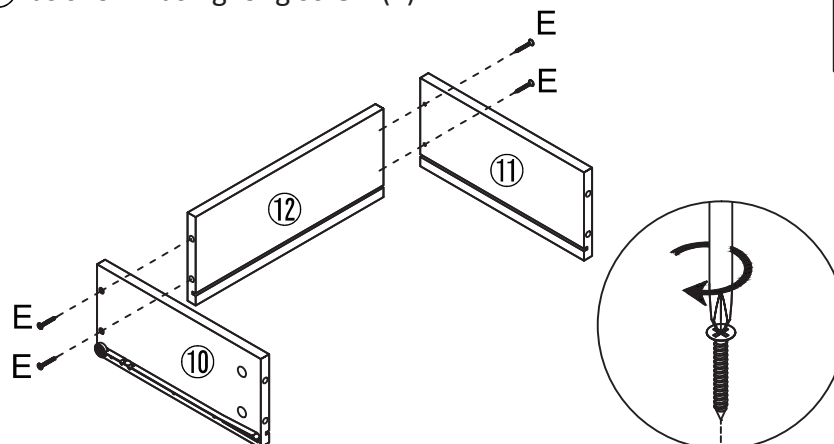





## Step 8

1. Insert the drawer bottom panel (13) into assembly as shown .

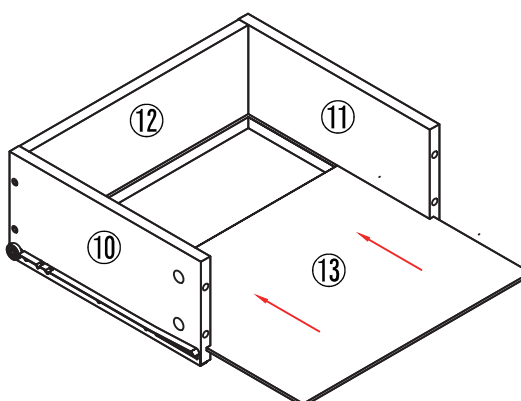


## Step 9

1. Connect drawer handle (H) to drawer door (9) as shown using handle screws (I).
2. Screw cambolts (A) into drawer door (9).
3. Insert camlocks (B) into left drawer panel (10) and right drawer panel (11) .
4. Connect drawer door (9) to the assembly as shown .
5. Gently tighten camlocks.

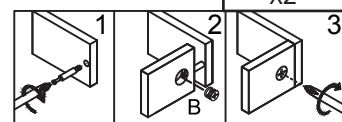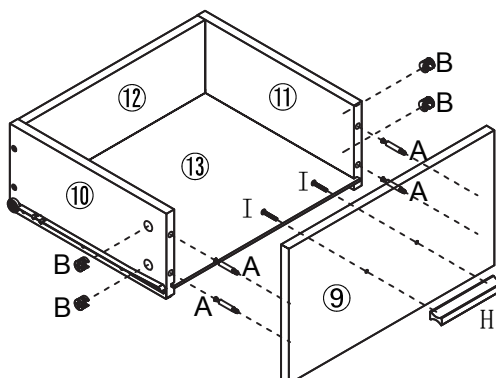


## Step 10

1. Carefully slide the drawer into the TV cabinet .

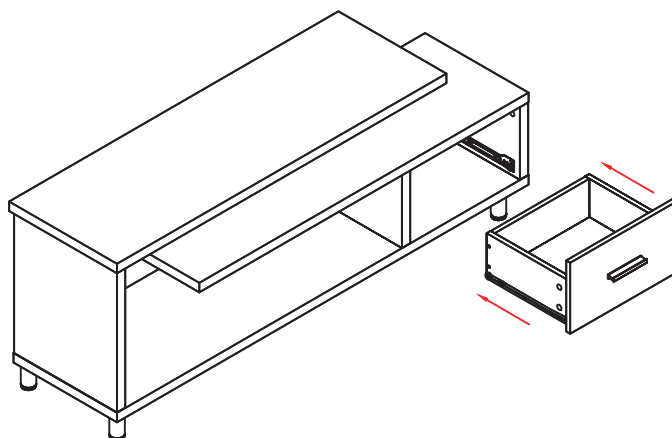

## Step 11

1. Place stickers (K) over camlock holes in side panel ③ .

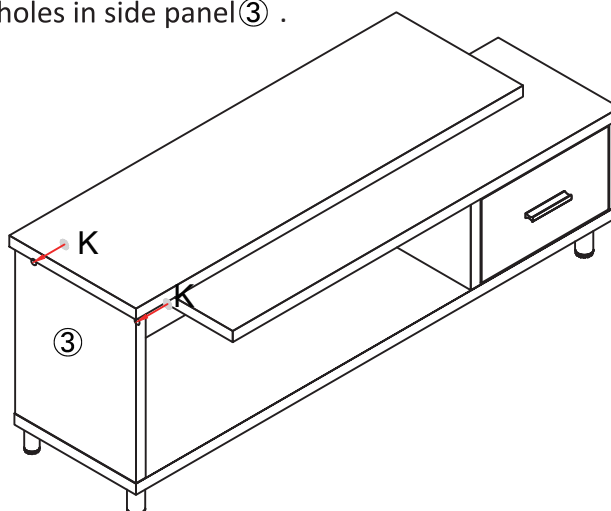

## Step 12

1. Finish and enjoy .

