

Hardware List

Α		Ø1/4"x12mm	Bolt	6	pcs
В		Ø1/4"x25mm	Bolt	10	pcs
С	**************************************	Ø4x35	Screw	4	pcs
D		M4	Hex key	1	рс
E			Glass pad	10	pcs




Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.


All rights reserved. P.3



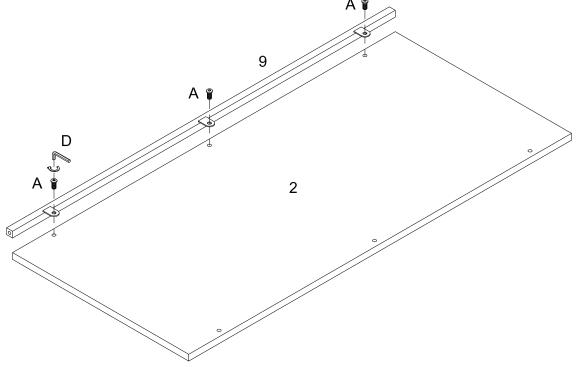

Attach part (9) to part (2) using bolt (A) with hex key (D).


Step 2

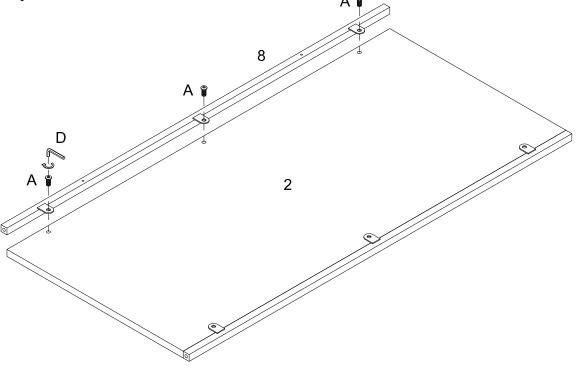


Attach part (8) to part (2) using bolt (A) with hex key (D)




(C) with screwdriver.

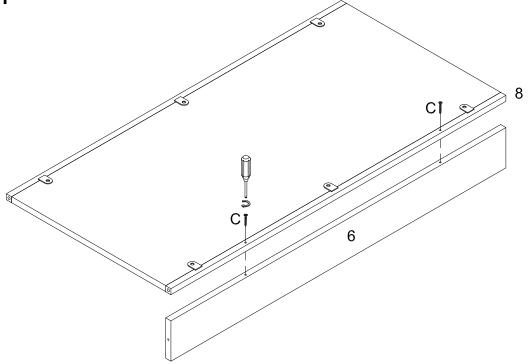


Attach part (8) to part (6) using screw (C) with screwdriver.

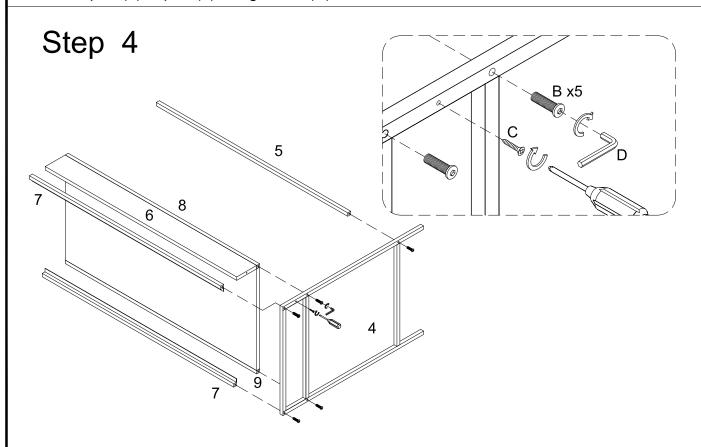


Attach part (4) to part (5,7,8,9) using bolt (B) with hex key (D), and to part (6) using screw

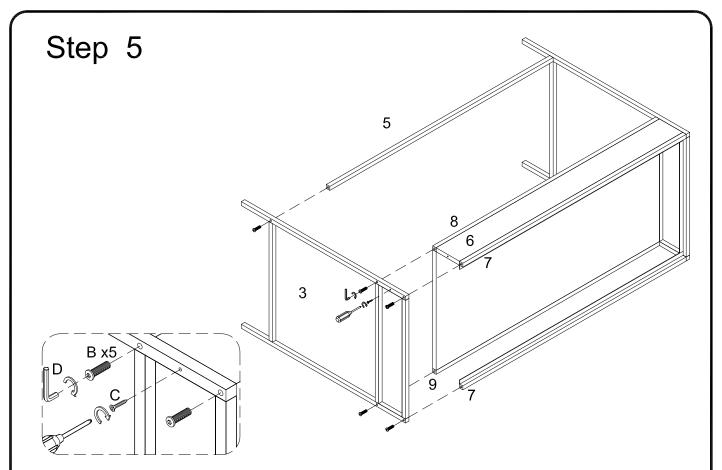


Attach part (3) to part (5,7,8,9) using bolt (B) with hex key (D), and to part (6) using screw (C) with screwdriver.

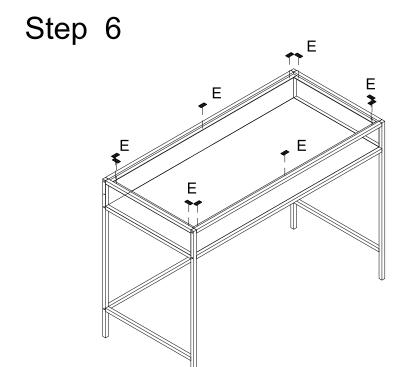

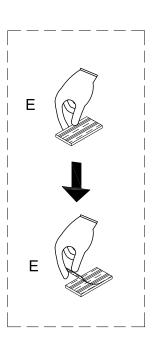

Remove cover tape on glass pads (E), then stick it as diagram.

Step 7

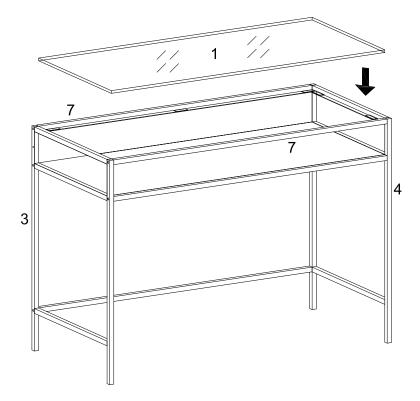

Place glass (1) as per diagram carefully.

Step 8



Final Assembly