
ASSEMBLY AND INSTALLATION INSTRUCTIONS


OP38795


WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. READ AND SAVE THIS INSTRUCTION.

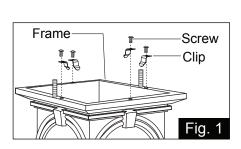

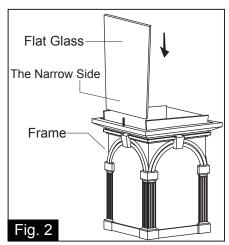

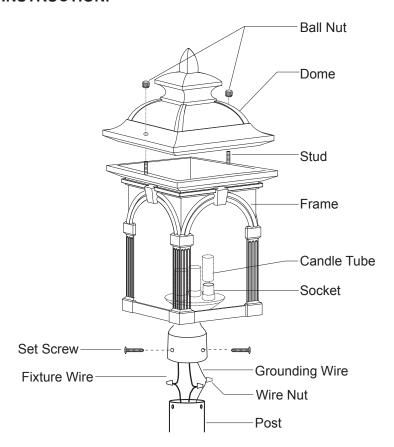

- 1. Unscrew the ball nuts and remove the dome away from the frame.
- 2. Unscrew and remove the screws and clips from the frame. Place the flat glasses into the frame carefully, and then restore the screws and clips back to secure the flat glasses. (See Fig.1 and Fig.2)

Note: Slide the narrow side of the flat glass downward into the notch inside of the frame.

- 3. Pull out the wires and grounding wire from the post. Make wire connections using the wire nuts:
 - ---The black wire from the fixture to the black wire from the post.
 - ---The white wire from the fixture to the white wire from the post.
 - ---The grounding wire from the fixture to the grounding wire from the post. Carefully tuck the wires back into the post.
- 4. Place the fixture on the post, then secure it with the set screws.
- 5. Attach the candle tubes onto the sockets, then install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
- 6. Restore the dome back to the frame, and then secure it with ball nuts.
- 7. Turn on the power at the main fuse or circuit breaker box.

