

Size of Mattress and Foundation

The length and width of the upper bunk mattress and foundation are as follows :

<u>Length</u>	<u>Width</u>	<u>Thickness</u>
74" - 75"	37 ½" - 38 ½"	9 ½" max

You must use only this size mattress.

Ensure thickness of mattress and foundation combined does not exceed 9 ½" and that the mattress is at least 5" below upper edge of guardrails.

This Bunk Bed uses a slat kit for mattress foundation.

Replacement Parts

Replacement parts, including additional guardrails, may be obtained from any Atlantic Furniture dealer



SAFETY WARNINGS



- (1) Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- (2) Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
- (3) Surface of mattress must be at least 5 in. (127mm) below the upper edge of guardrails.
- (4) Do not allow children under 6 years of age to use the upper bunk.
- (5) Periodically check and ensure that the guardrail, ladder, and other component are in their proper position, free from damage, and that all connectors are tight.
- (6) Do not allow horseplay on or under the bed, and prohibit jumping on the bed.
- (7) Always use ladder for entering or leaving upper bunk.
- (8) Do not use substitute parts. Contact the manufacturer for replacement parts.
- (9) Use of a night light may provide added safety precaution for a child using the upper bunk.
- (10) Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to a wall, the guardrail that runs the full length of the bed must be placed against the wall to prevent entrapment between the bed and the wall.
- (11) The use of water or sleep flotation mattress is prohibited.
- (12) Prohibit more than one person on upper bunk.
- (13) **STRANGULATION HAZARD** : Never attach or hang items to any part of the Bunk Bed that are not designed for use with the bed: for example, but not limited to, hooks, belts and jump ropes.
- (14) Keep these instructions for future reference.



WOODLAND STAIRCASE BOOKSHELF BUNK BED ATLANTIC FURNITURE

ASSEMBLY INSTRUCTIONS



(TWIN - TWIN) (TWIN - FULL)

Thank you for choosing our new bunk bed.


This practical design offers the utmost in versatility.

Before assembling your Woodland Staircase Bookshelf bunk bed, please read through these instructions carefully, familiarize yourself with the different parts.


Please note that you will require a Phillips head screwdriver and an Allen wrench.

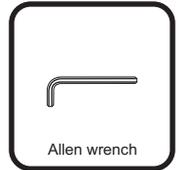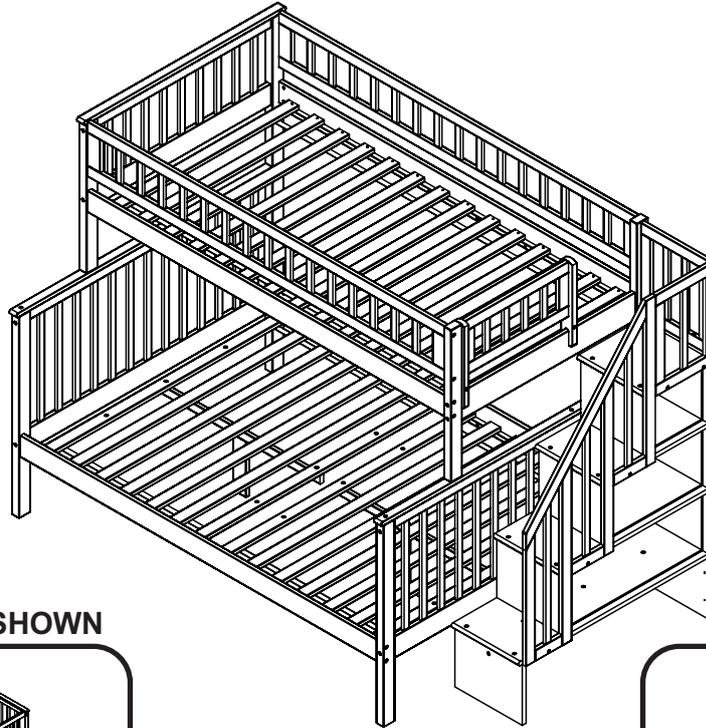

TWIN OVER FULL SHOWN

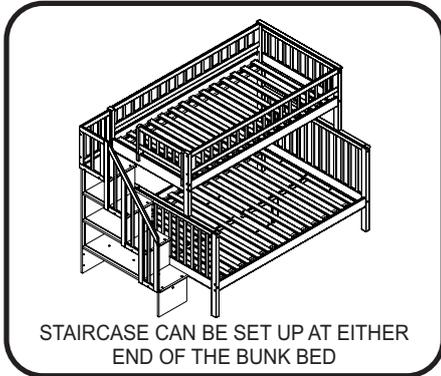


STAIRCASE CAN BE SET UP AT EITHER END OF THE BUNK BED

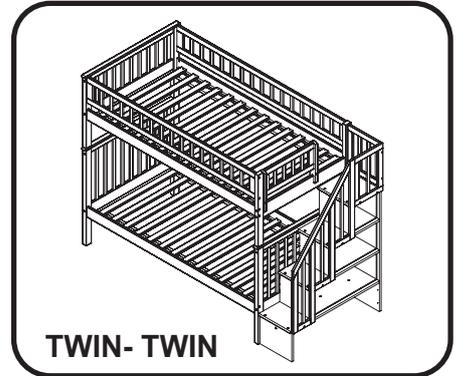

TWIN-TWIN

HARDWARE

NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, ALLEN SCREW, JCB, BARREL NUT, WOODEN DOWEL OR WOOD SCREW ARE DAMAGED DURING ASSEMBLY.

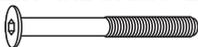A  JCB M6 X 3 1/8" - 16 pcs
Spare - 2 pcs


B  Barrel Nut - 16 pcs
Spare - 2 pcs

C  Wooden Dowel - 26 pcs
Spare - 2 pcs

D  Allen Screw 2 3/8" - 8 pcs
Spare - 2 pcs

E  Allen Screw 2" - 36 pcs
Spare - 2 pcs


F  Allen Screw 2 3/4" - 4 pcs
Spare - 2 pcs

G  Metal Pins - 4 pcs

H  Wood Screw 1" - 2 pcs
Spare - 1 pc

I  Wood Screw 5/8" - 15 pcs
Spare - 2 pcs


J  L Bracket - 6 pcs

K  Large L Bracket - 1 pc


L  Wood Buttons - 4 pcs
(Twin - Full)

M  Allen Wrench - 2 pcs
Spare - 1 pc

PARTS LIST




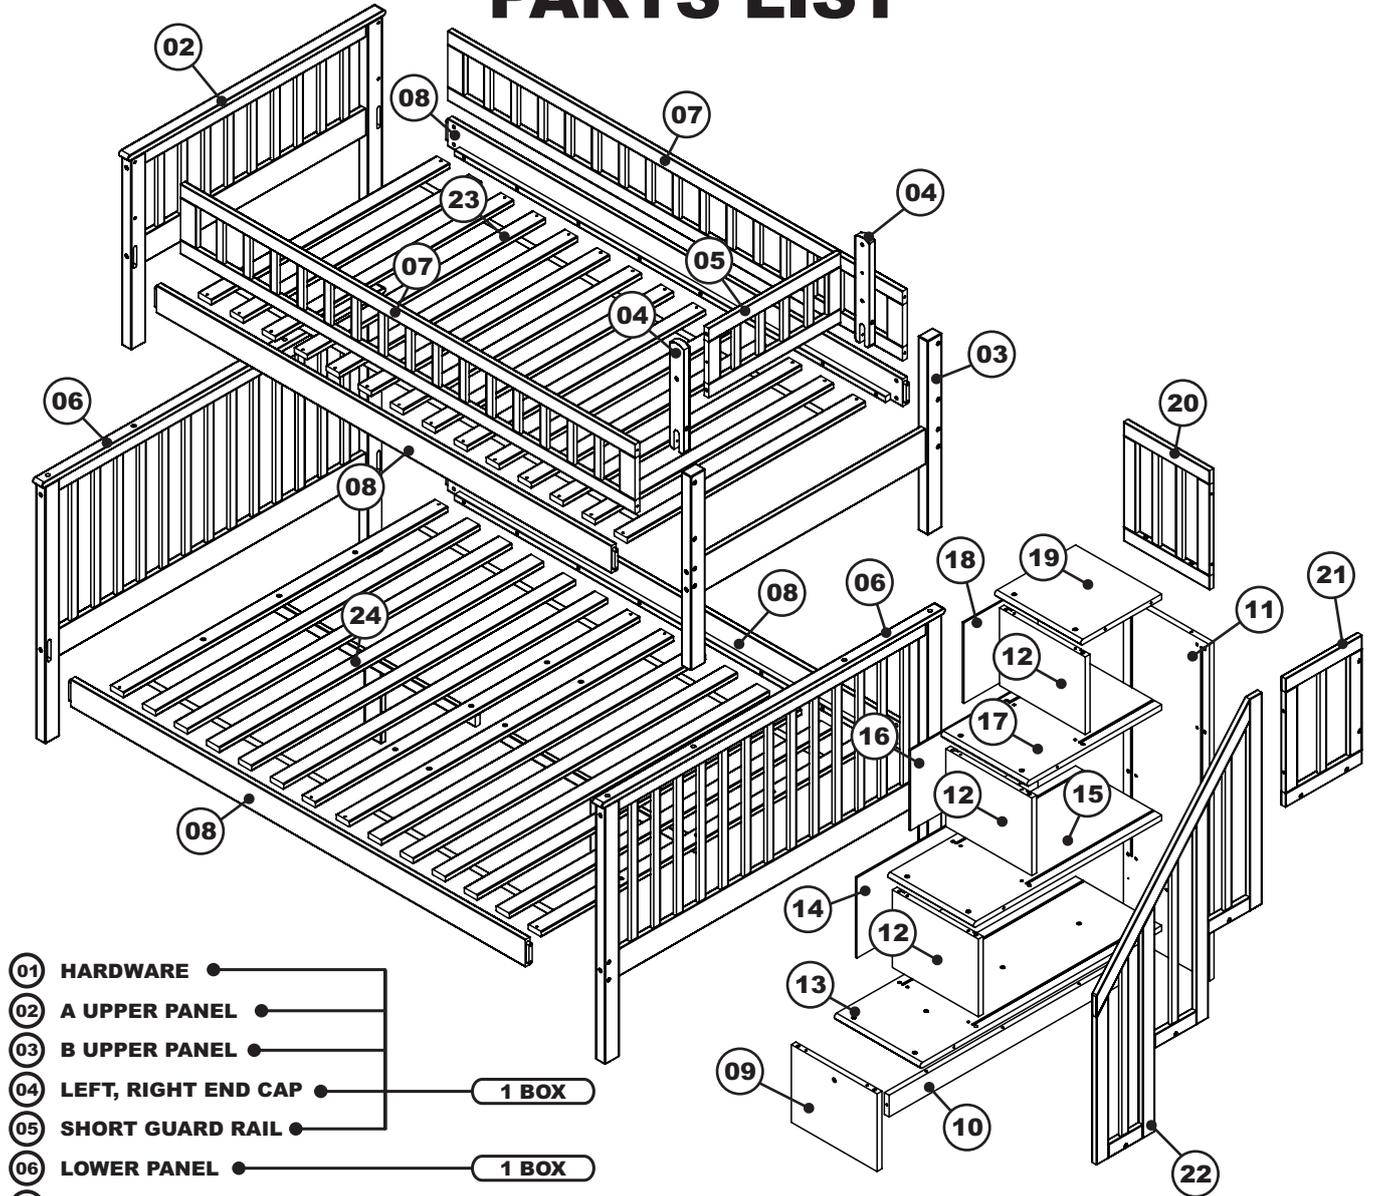


- 01 **HARDWARE** ●
- 02 **A UPPER PANEL** ●
- 03 **B UPPER PANEL** ●
- 04 **LEFT, RIGHT END CAP** ● 1 BOX
- 05 **SHORT GUARD RAIL** ●
- 06 **LOWER PANEL** ● 1 BOX
- 07 **FRONT, BACK GUARD RAIL** ● 1 BOX
- 08 **LONG RAILS** ● 1 BOX
- 09 **FLOOR STORAGE SIDE PANEL** ●
- 10 **BOTTOM CROSS BRACE** ●
- 11 **LONG SIDE PANEL** ●
- 12 **BOOKSHELF SIDE PANEL** ●
- 13 **FLOOR STORAGE TOP PANEL** ●
- 14 **BOOKSHELF BACK PANEL 1** ●
- 15 **BOOKSHELF TOP PANEL 1** ●
- 16 **BOOKSHELF BACK PANEL 2** ● 1 BOX
- 17 **BOOKSHELF TOP PANEL 2** ●
- 18 **BOOKSHELF BACK PANEL 3** ●
- 19 **BOOKSHELF TOP PANEL 3** ●
- 20 **BACK SHORT GUARD RAIL** ●
- 21 **SIDE SHORT GUARD RAIL** ●
- 22 **HAND GUARD RAIL** ●
- 23 **TWIN SLAT KIT** ● 1 BOX
- 24 **FULL LOWER BUNK SLAT KIT** ● 1 BOX
- OR
- 25 **TWIN LOWER BUNK SLAT KIT** ● 1 BOX

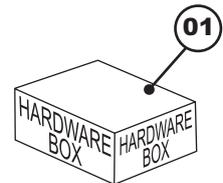


STEP 1

Attach the long rails (08) to the upper panels (02)(03), using JCB M6 X 3 1/8" (A) and barrel nut (B). Tighten with the Allen wrench (M).

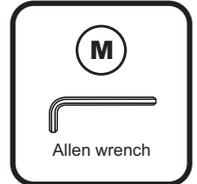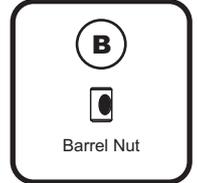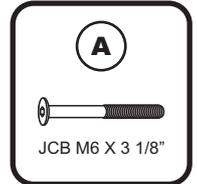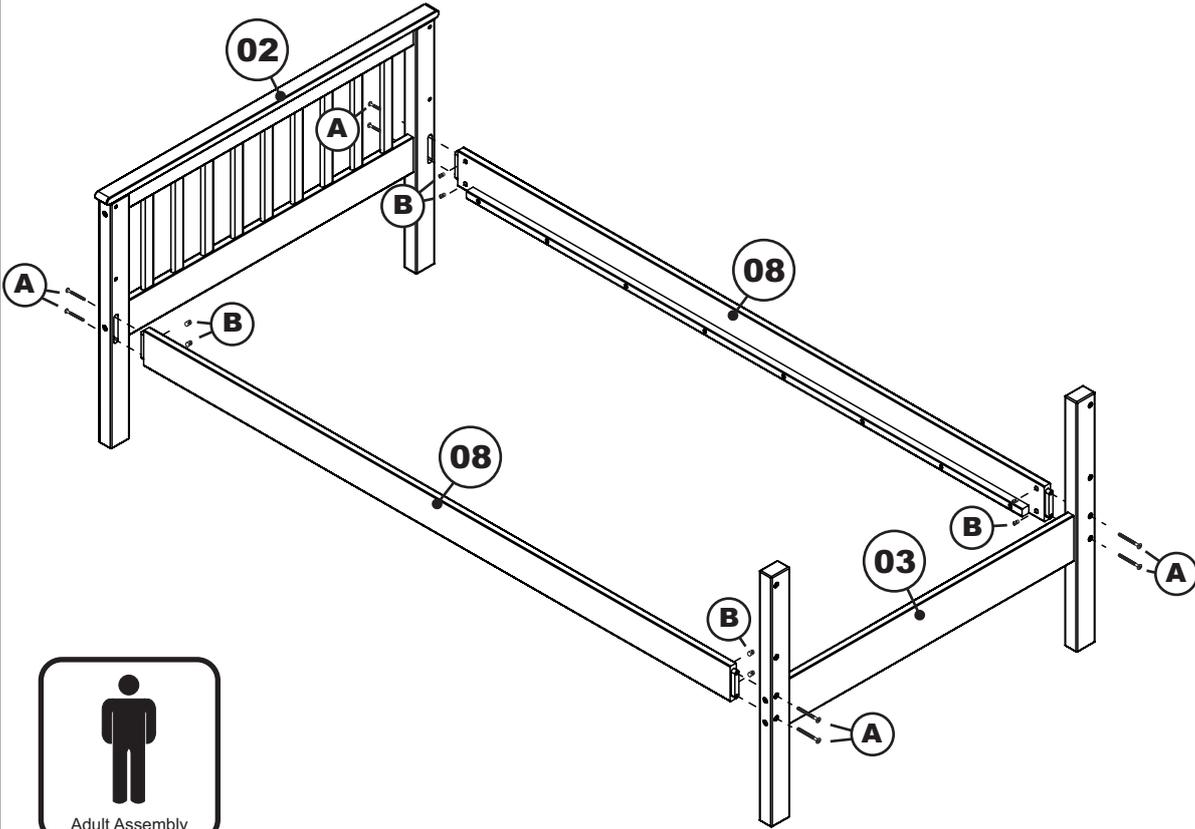


STEP 2

Lay the twin slat kit (23) onto the bed. Fix in place using wood screws provided in the slat kit box. FOR SLAT KIT ASSEMBLY follow assembly instructions included with slat kit.

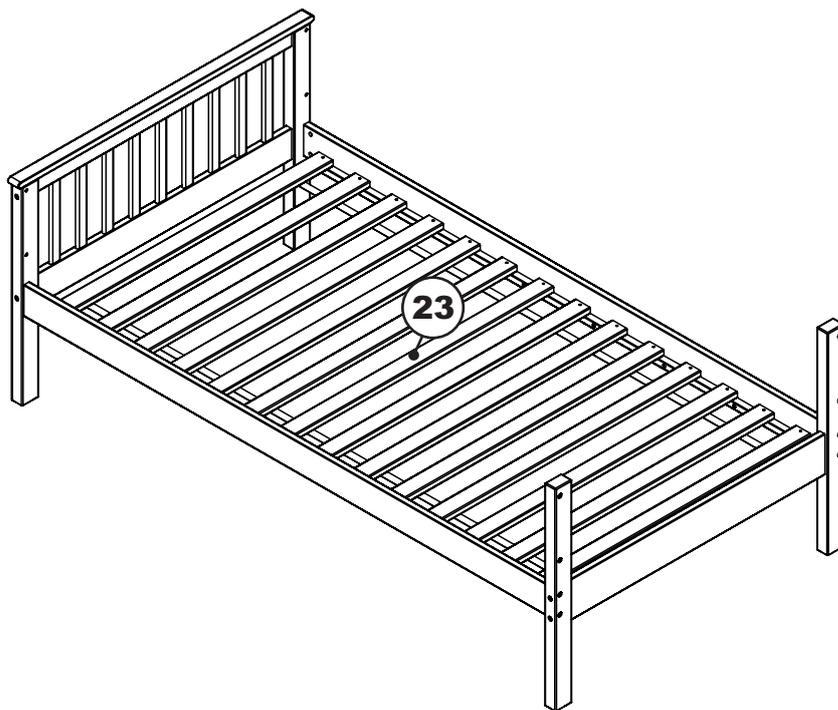

STEP 3


Attach the front, back guard rails (07) to the upper panel assemblies using Allen screw (D). Tighten with the Allen wrench (M).

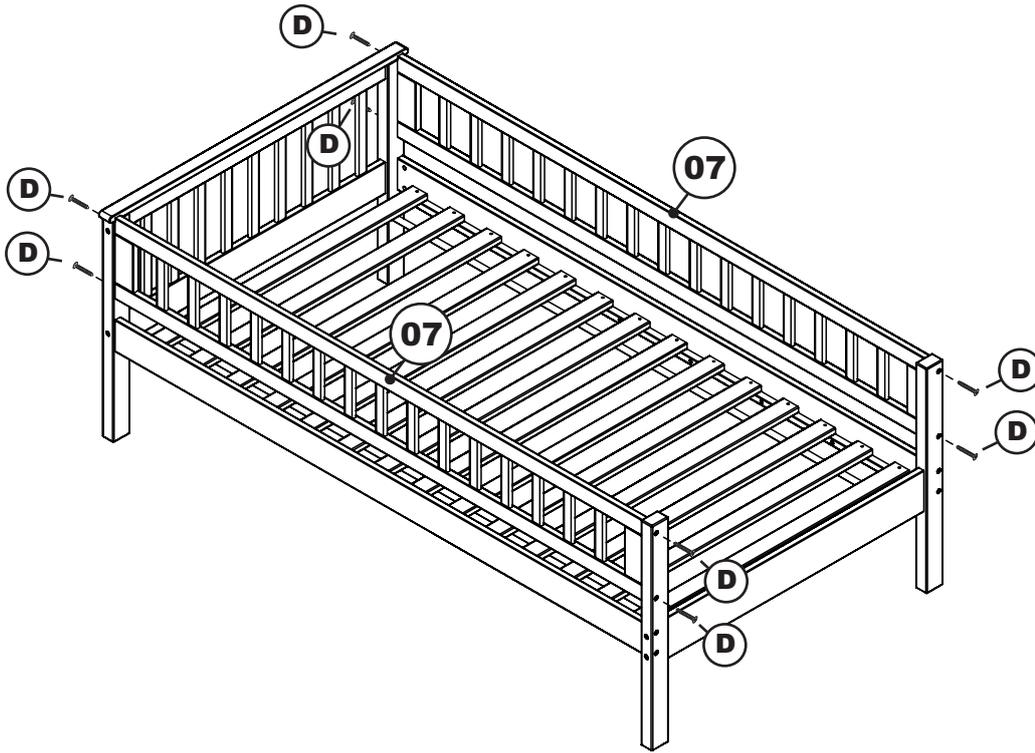

Adult Assembly




Allen Screw 2 3/8 "

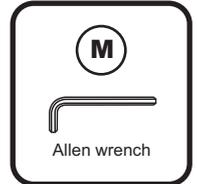


Allen wrench

STEP 4

Insert wooden dowel (C) to the locator holes will receive C as shown below. Attach the short guard rail (05) to the left, right end caps (04), using Allen screw (E), Tighten with the Allen wrench (M).

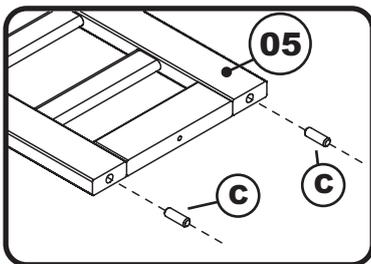


INSIDE SECTION

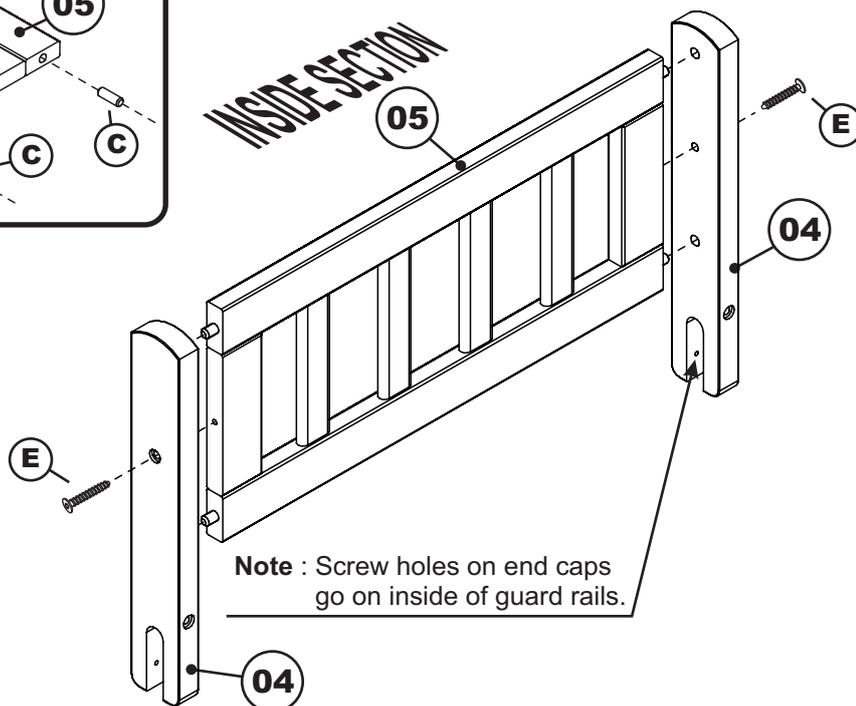

Note : Screw holes on end caps go on inside of guard rails.




Adult Assembly

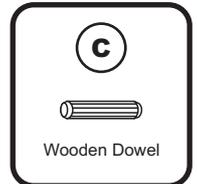

Wooden Dowel






Allen Screw 2 "

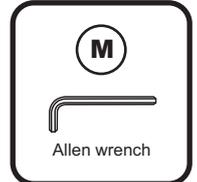

Allen wrench

STEP 5

Attach the short guard rail assemblies to the upper panel assemblies as shown below, using wood screw (H), tighten with the Phillips head screwdriver. (Customer supplied)

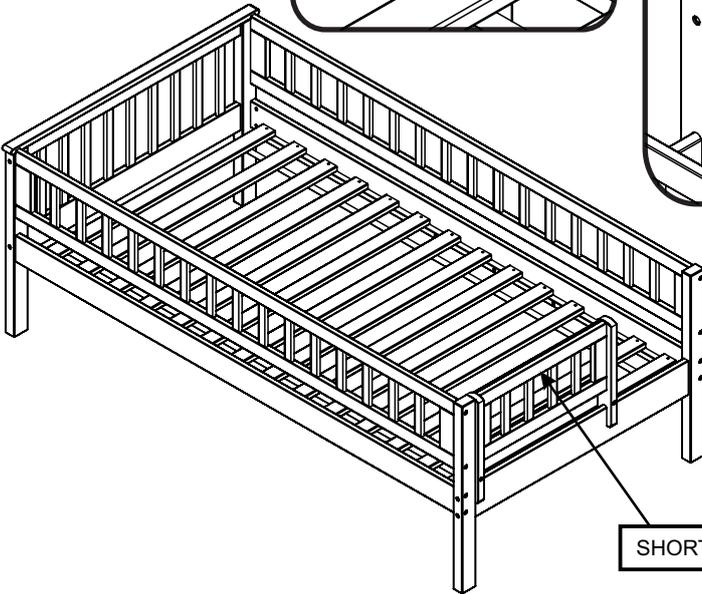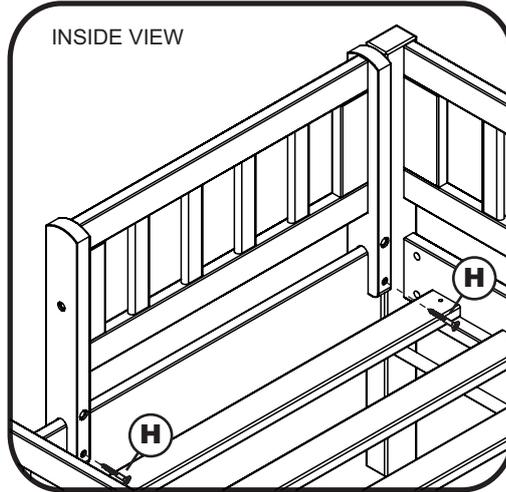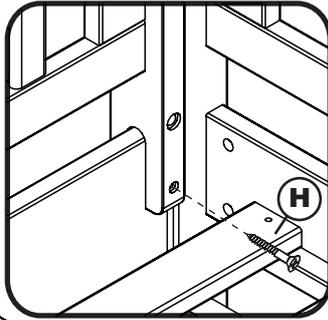

Note : Screw holes on end caps go on inside of guard rails.



Adult Assembly



WOOD SCREW
D6 X 1"





Customer Supplied


Phillips head
screwdriver

STEP 6


Attach the long rails (08) to the lower panel (06) using JCB M6 X 3 1/2" (A), and barrel nut (B). Tighten with the Allen wrench (M). Full lower panel shown. Twin over Twin bunk use Twin lower panel.

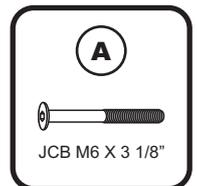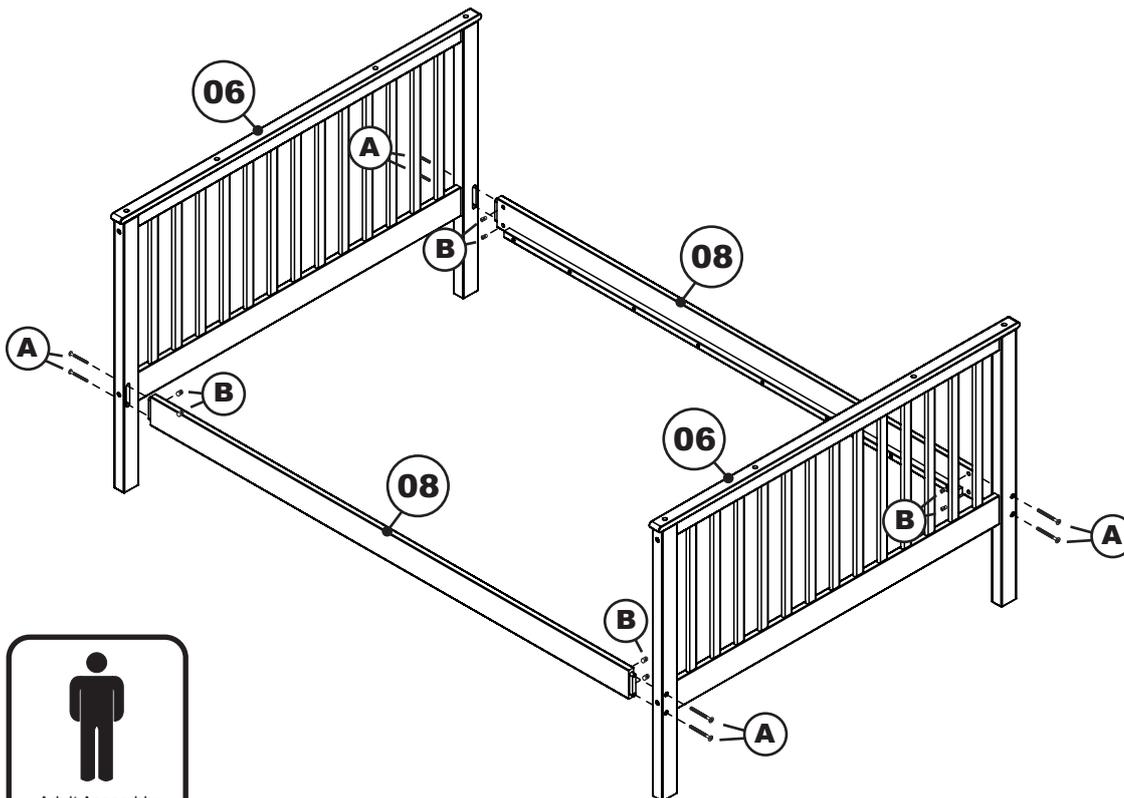

JCB M6 X 3 1/8"

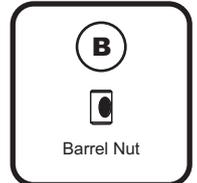

Barrel Nut

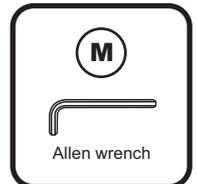


Allen wrench



Adult Assembly

STEP 7

Lay the full slat kit (24) onto the bed. Fix in place using wood screws provided in the slat kit box. FOR SLAT KIT ASSEMBLY follow assembly instructions included with slat kit.

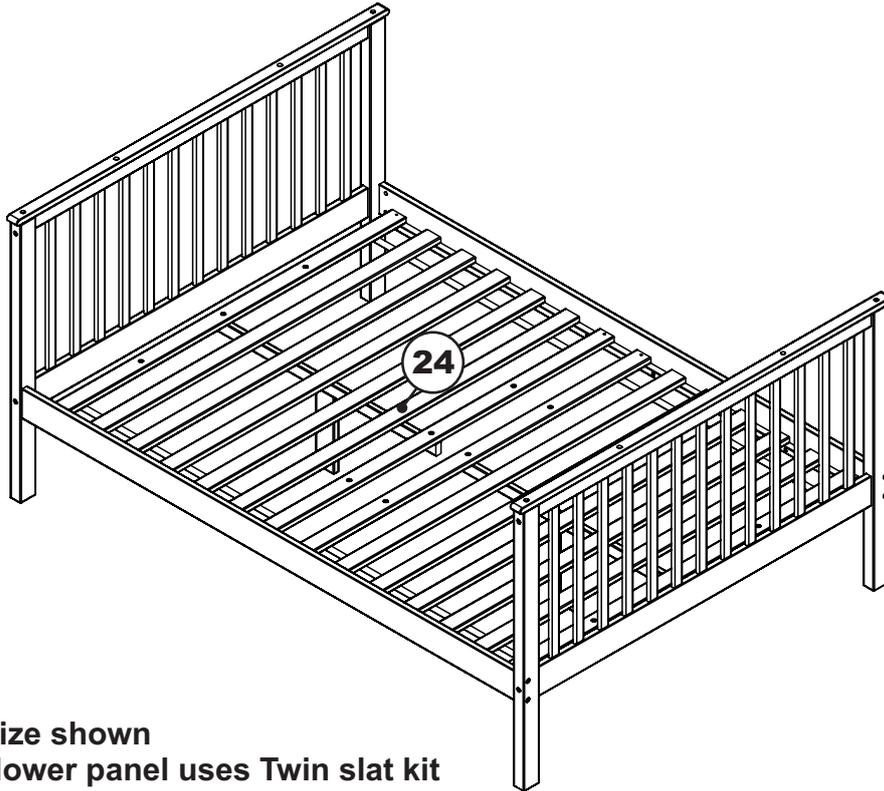



Full size shown
Twin lower panel uses Twin slat kit

STEP 8

Insert metal pins (G) into the holes on top of the lower panels. Lift the upper panels onto the lower panels as shown, and fit the metal pins into the holes in the bottom of the upper panel legs.





CAUTION
This step requires two strong people.

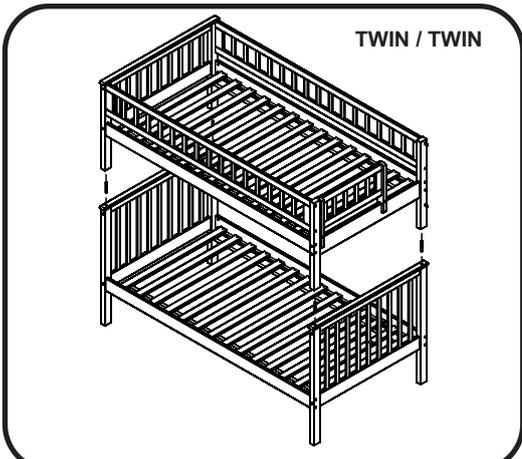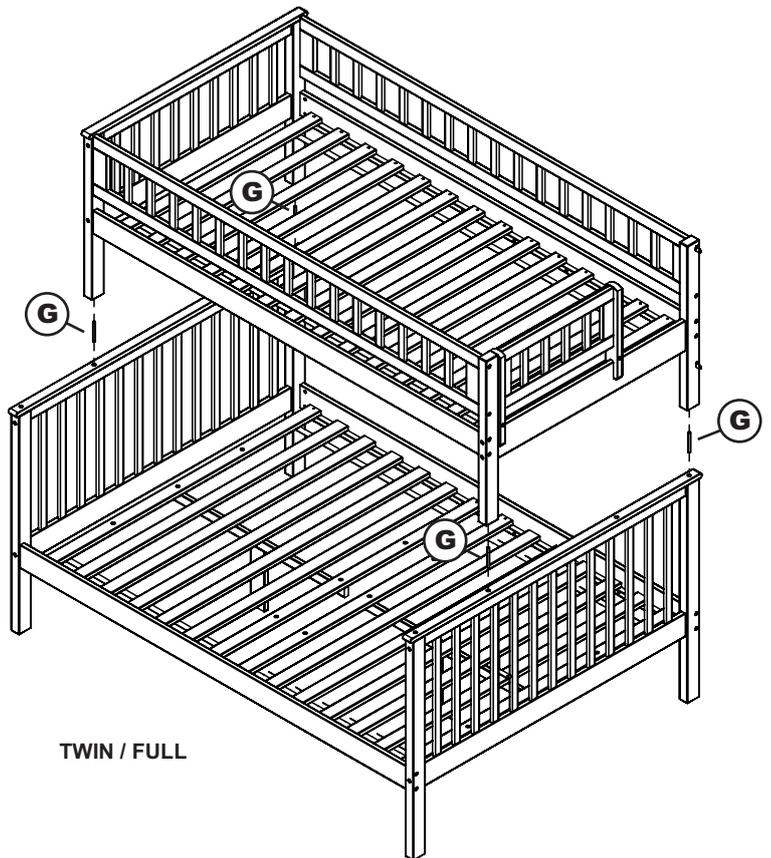

TWIN / FULL



STEP 9 Insert wooden dowel (C) to the locator holes will receive C as shown below.

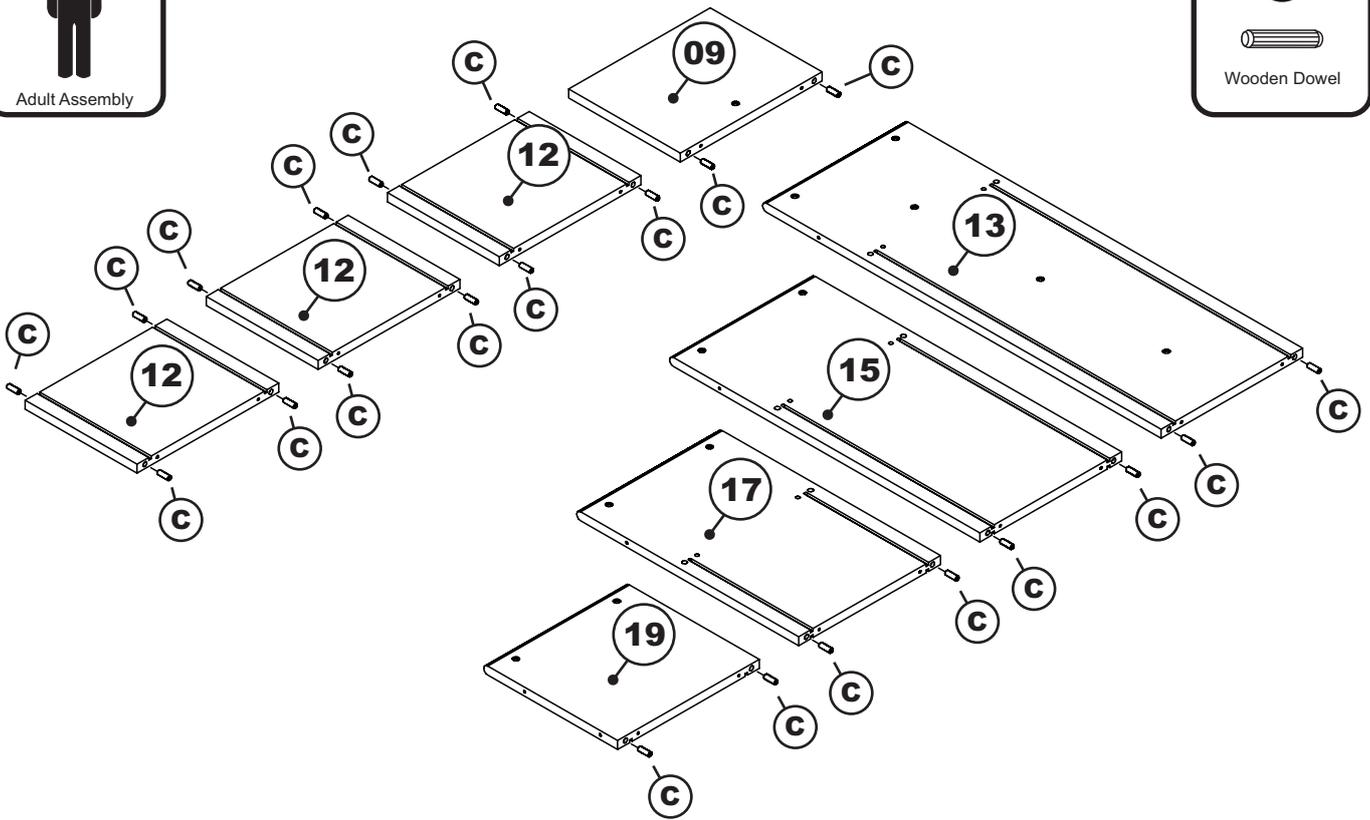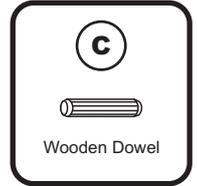

STEP 10 Attach bottom cross brace (10) to the floor storage side panel(09)as shown below. Using allen screw (E). Tighten with allen wrench (M), but don't fully tighten this yet.



Attach floor storage top panel (13) to the floor storage side panel assemblies. Using allen screw (E). Tighten with allen wrench (M).

Attach long side panel (11) to the floor storage side panel assemblies. Using allen screw (E). Tighten with allen wrench (M). After this,Tighten allen screw on the floor storage side panel.

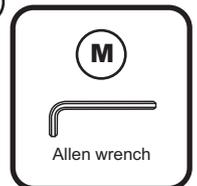
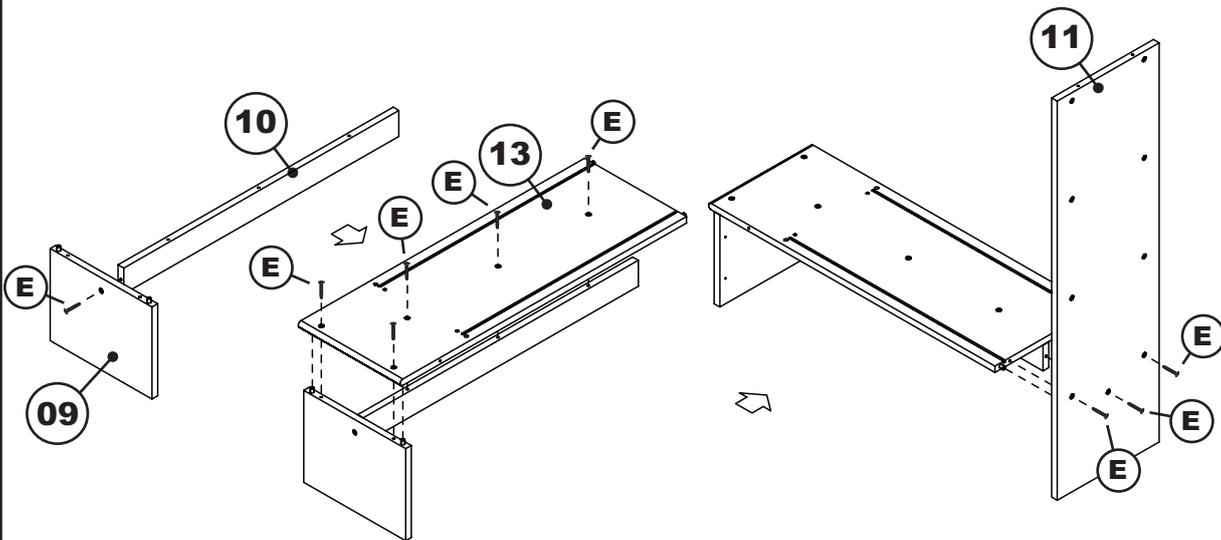


STEP 11

Attach bookshelf side panel (12) to the floor storage side panel assemblies as shown below. Using allen screw (E). But don't fully tighten these yet. Leave them a bit loose to make fitting the back panel easier. Guide bookshelf back panel 1 (14) in carefully so that it won't jump out of its grooves. Be sure it fits fully into the groove at the bottom (in floor storage top panel).

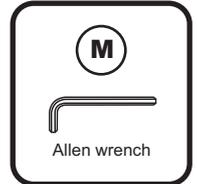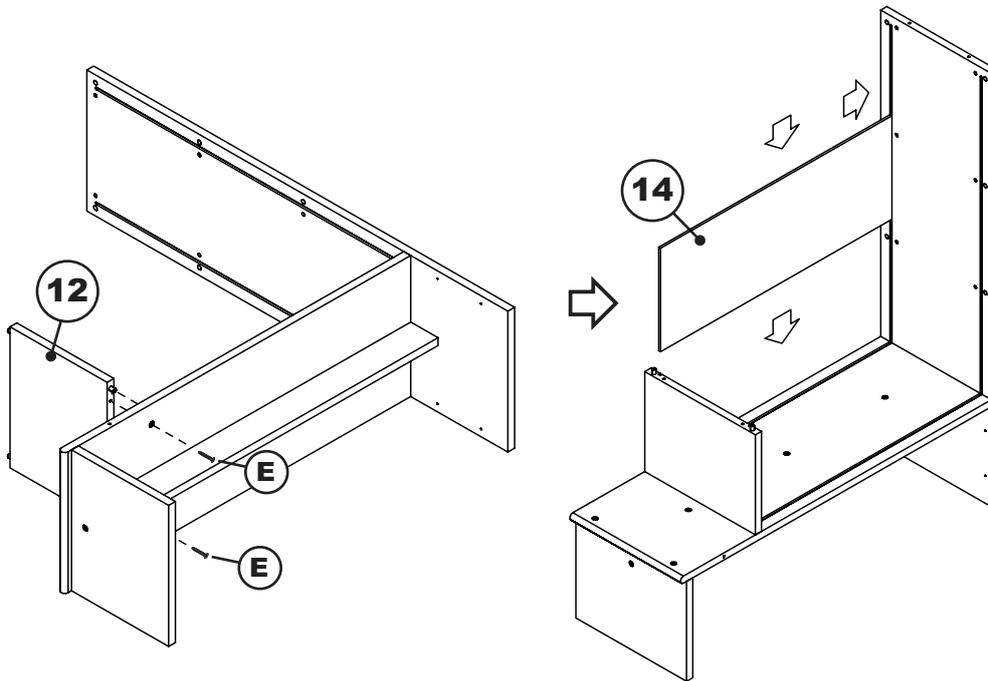**STEP 12**

Attach bookshelf top panel 1(15) to the bookshelf side panel (12) using allen screw (E). Tighten with Allen wrench (M). Attach bookshelf top panel assemblies to the floor storage assemblies, using allen screw (E). Tighten with allen wrench (M). Guide bookshelf back panel 2 (17) same as step 11.

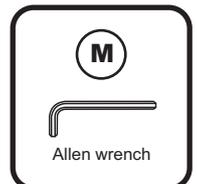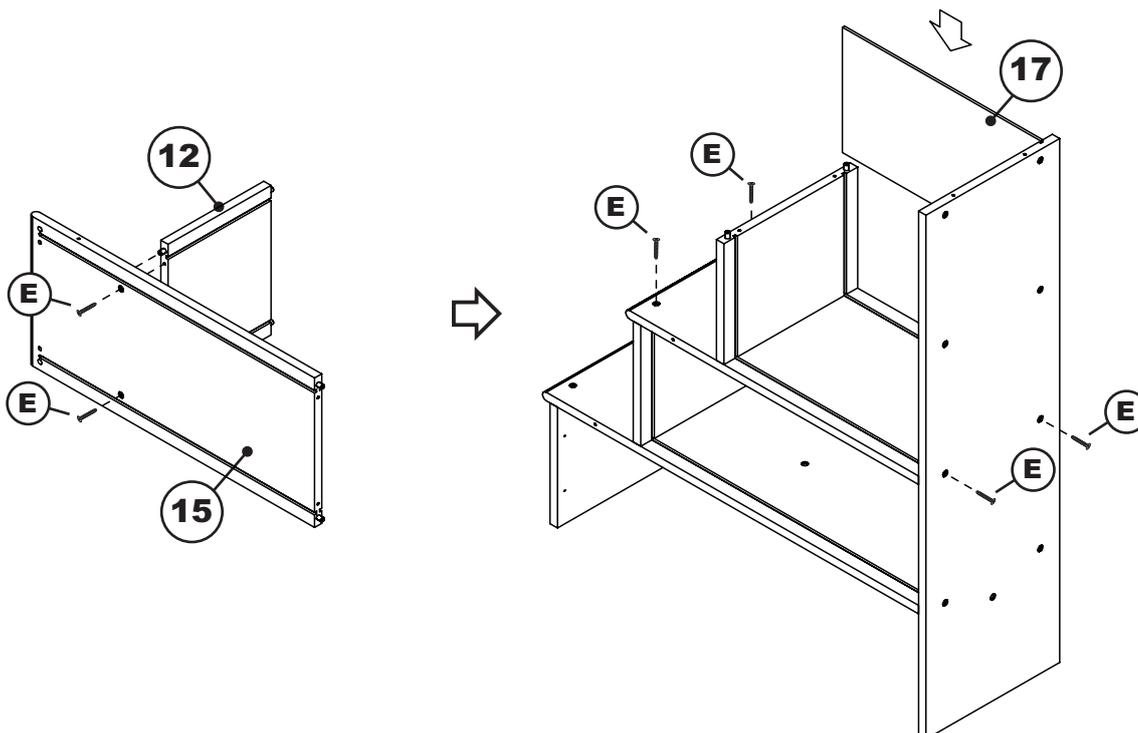



STEP 13

Attach bookshelf top panel 2(17) to the bookshelf side panel (12) using allen screw (E). Tighten with Allen wrench (M). But don't fully tighten these yet. Leave them a bit loose to make fitting the back panel easier.

Attach bookshelf top panel assemblies to the floor storage assemblies as shown below. Using allen screw (E). Tighten with allen wrench (M).




Install bookshelf back panel 3 (18).

After this, tighten allen screw of bottom section top panel 2.

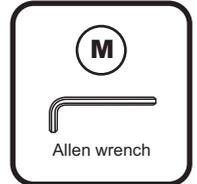
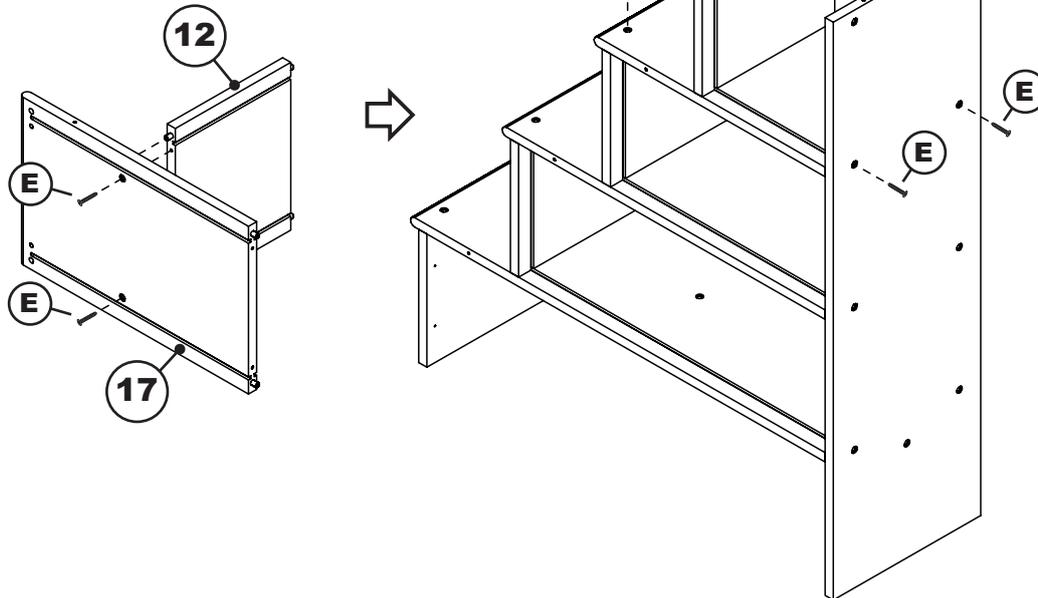
**STEP 14**

Attach bookshelf top panel 3 (19) to the floor storage assemblies. Using allen screw (E). Tighten with allen screw (M).



Attach back short guard rail (20) to the staircase bookshelf assemblies as shown below. Using allen screw (F). Tighten with allen wrench (M).

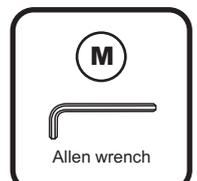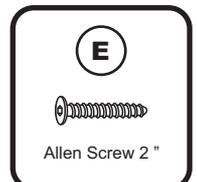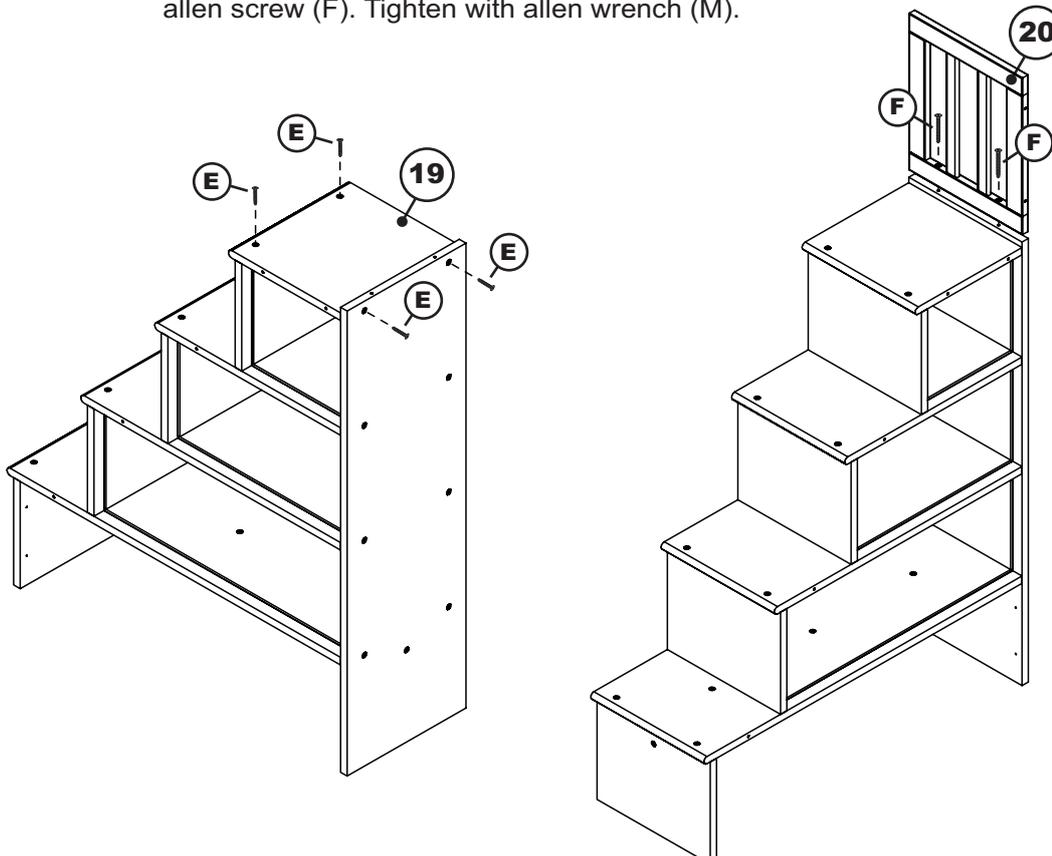

STEP 15 Attach side short guard rail (21) to the staircase bookshelf assemblies. Using allen screw (E). Tighten with allen wrench (M).



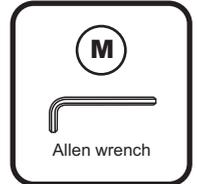
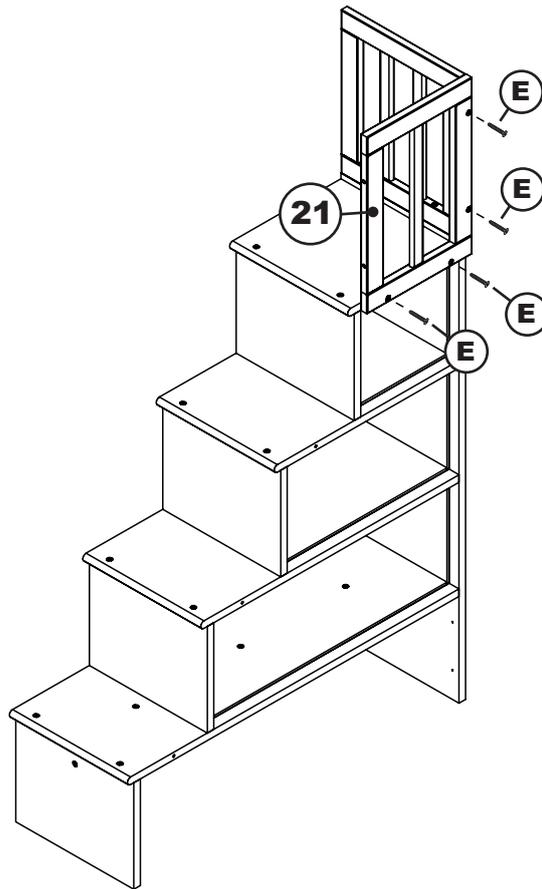


STEP 16 Attach hand guard rail (22) to the staircase bookshelf assemblies. Using allen screw (E)(F). Tighten with allen wrench (M). Recheck that all screws are tight.

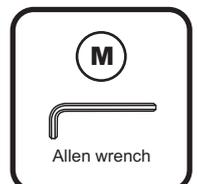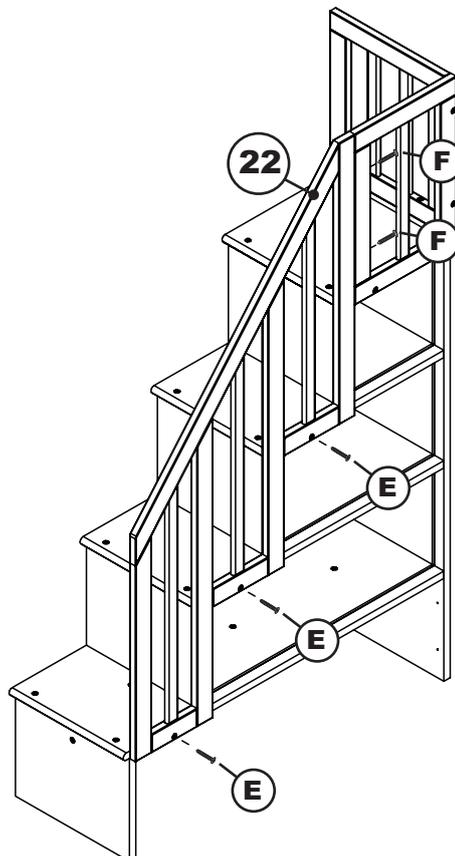


STEP 17



Move the bunk bed and staircase bookshelf assemblies where you want to place them in the room. Attach staircase bookshelf assembly to the bunk bed assembly as shown below. Fix L bracket (J) to upper, lower bunk panel using wood screws (I) as shown. Fix large L bracket (K) as shown. Lastly, cover holes with wood buttons (L). (Twin-Full only.)

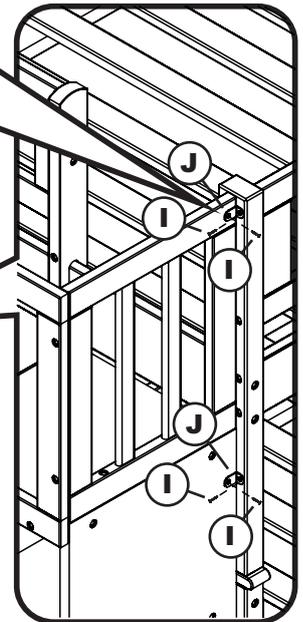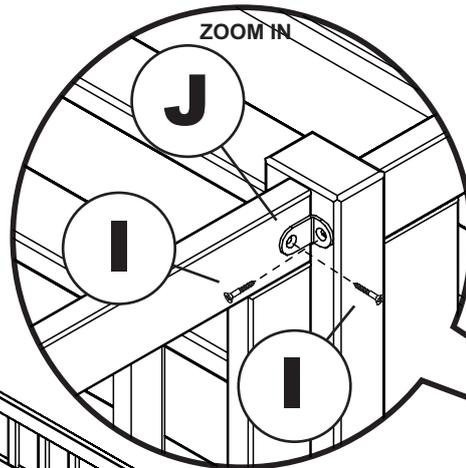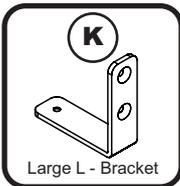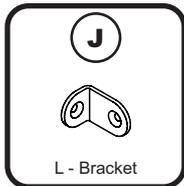


BACK VIEW

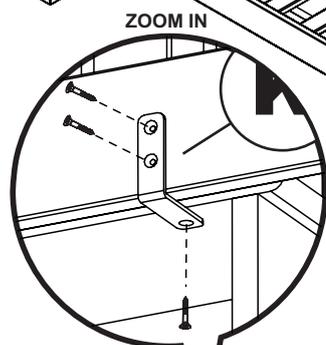

ZOOM IN

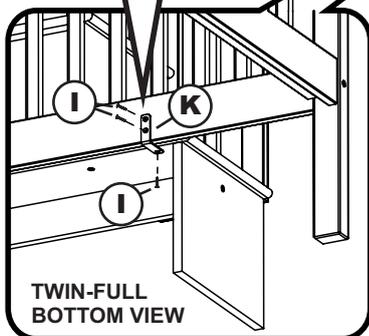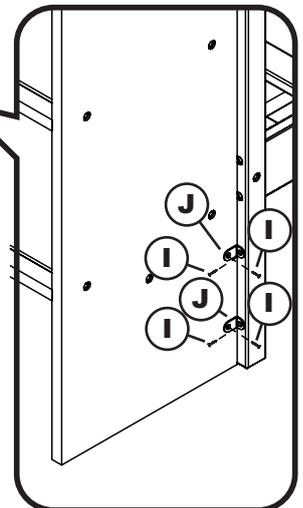

TWIN-FULL
BOTTOM VIEW

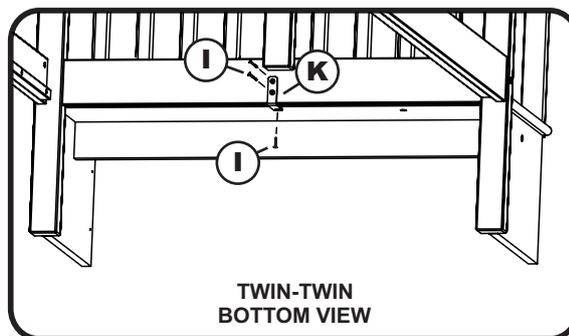

TWIN-TWIN
BOTTOM VIEW

Congratulations !

Your Woodland Staircase Bookshelf bunk bed is now ready for use. We recommend that you recheck that all screws are tight, and that all parts are secure before use. Periodically to ensure lasting Safety.