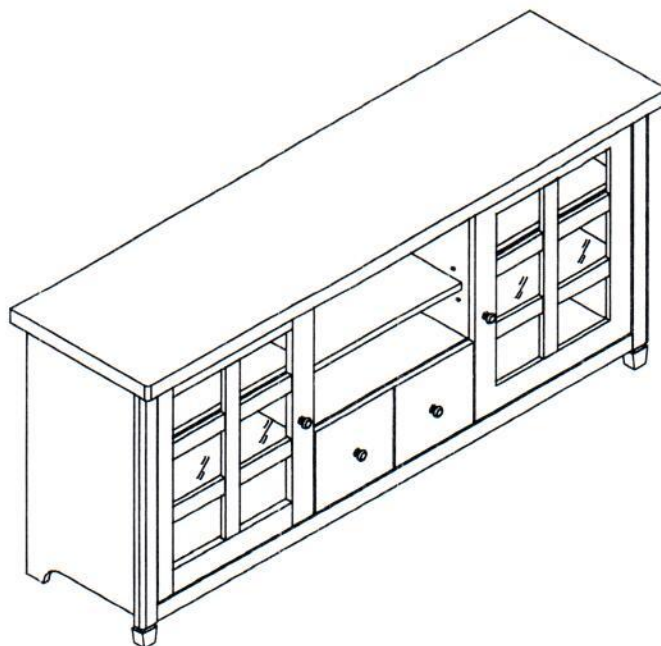# TV STAND

## Assembly instructions

We have designed our furniture with you,the customer in mind. Our clear,easy to follow.
step by step instructions will guide you through the project from start to finish.
Feel confident that this will be a fun and rewarding project .The final product will be a quality piece of
furniture that will go together smoothly and give you years of enjoyment.

STOP Please do not return to the store
Broken or missing Hardware?
Need help with Assembly?

PARTS IDENTIFICATION
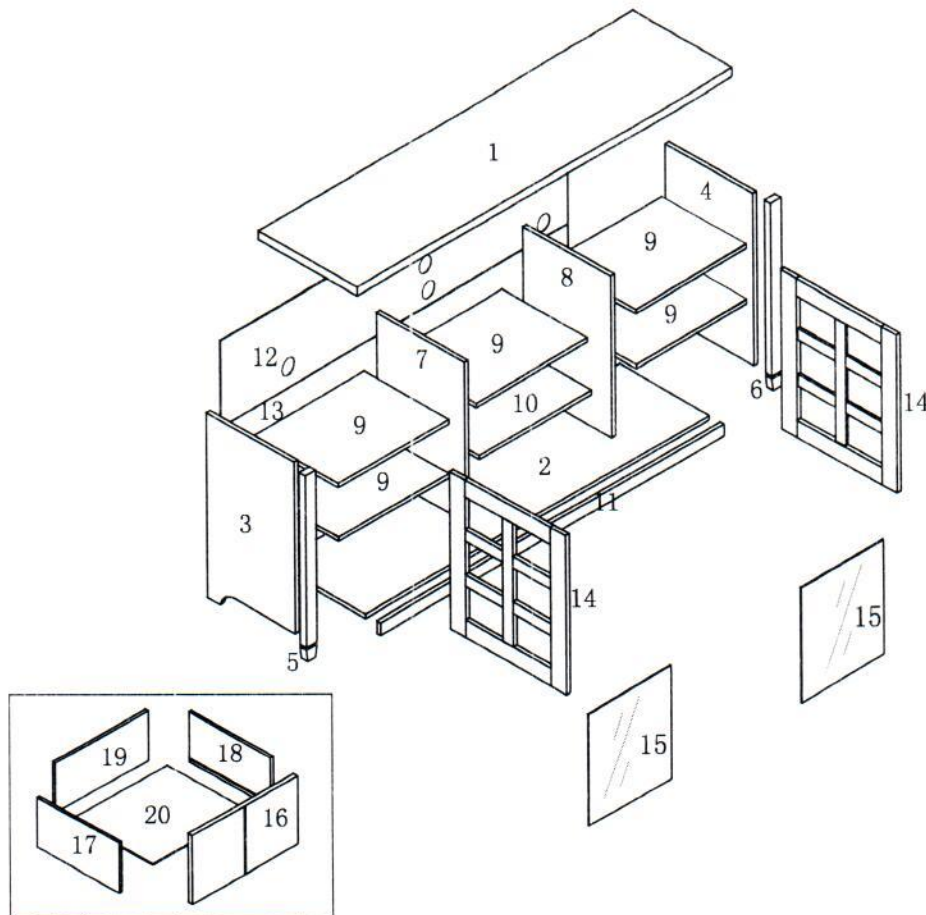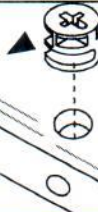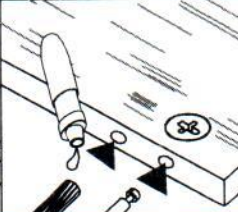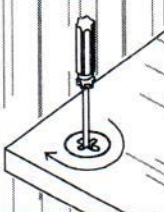
Please count and verify all parts before assembly

(1) Top Panel	1pc	(11)Bottom Support	1pc
(2) Bottom Panel	1pc	(12)Upper Back Panel	1pc
(3) Left Side Panel	1pc	(13)Lower Back Panel	1pc
(4) Right Side Panel	1pc	(14)Door Frame	2pcs
(5) Left Leg Post	1pc	(15)Glass Door	2pcs
(6) Right Leg Post	1pc	(16)Drawer Front Panel	1pc
(7) Left Divider Panel	1pc	(17)Left Drawer Side Panel	1pc
(8) Right Divider Panel	1pc	(18)Right Drawer Side Panel	1pc
(9) Shelf	1pc	(19) Drawer Back Panel	1pc
(10) Fixed Shelf	1pc	(20) Drawer Bottom Panel	1pc

HARDWARE IDENTIFICATION

A		Smaller Screw	Ø3.5x12	8pcs
B		Glass Clip	Ø15	8pcs
C		Middle Screw	Ø4×30	4pcs
D		Large Cambolt	L=20	4pcs
E		Large Camlock	Ø12	4pcs
F		Knob Screw	M4x25	4pcs
G		Knob	M5	4pcs
H		Small Cambolt	L29	19pcs
I		Small Camlock	Ø15	19pcs
J		Sticker	Ø20	12pcs
K		Dowel	Ø8x25	18pcs
L		Large Screw	Ø4x40	4pcs
M		Nail		30pcs
N		Hinge	**301C**	4pcs
O		Small Screw	Ø4x16	20pcs
P		Shelf Pin		20pcs
Q		Metal Leg	80x25x78	2pcs
R		Foot Pin		4pcs
S		Small Cambolt	L23	4pcs
T		Small Camlock	Ø12	4pcs
U		Small Sticker	Ø13	4pcs
V		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc

Assembling the unit with camlocks and wood dowels.

|				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

Step1

Attach glass to door frame (14) using screw (A) and glass clip (B) as shown.
* Place item on a smooth/soft surface such as carpet or a towel.
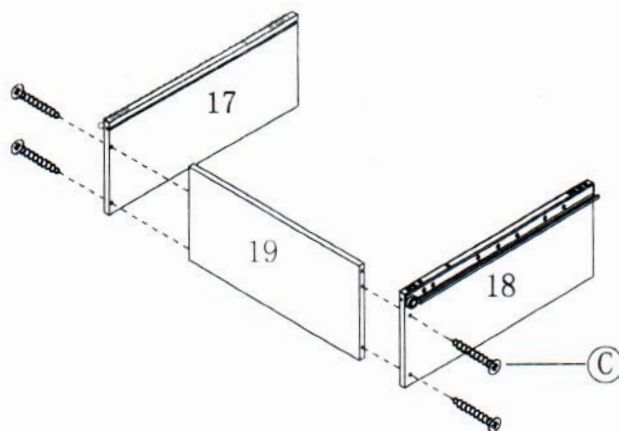
15

x2

14

Ⓐ

Ⓑ

14

14
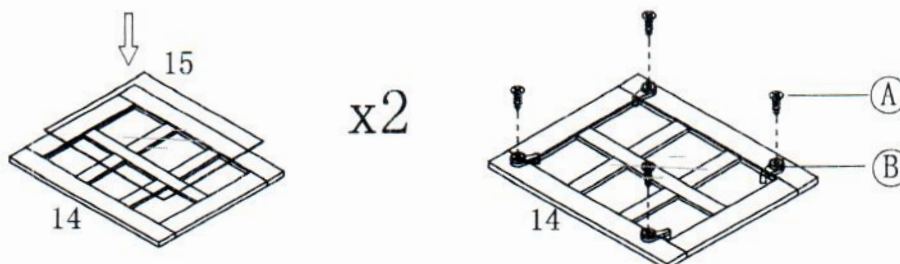
Note: Wear protective glove and eye protector.
when installing glass pieces.
Please hand tighten
screws. Do not use power tool.

Step2

Attach drawer back panel (19) to drawer side panel (17,18) using middle screw (C) as shown.

17

19

18

Ⓒ

PAY ATTENTION TO LOCATION OF

Step3

1. Insert drawer bottom panel (20) into grooves of side panels (17,18) and into drawer back panel (19).
2. Attach large cambolts (D) into drawer front panel (16).
3. Attach drawer front panel (16) to drawer assembly using camlocks (E) as shown.
4. Attach Knob (G) to drawer front panel (16) using Knob screw (F) as shown.
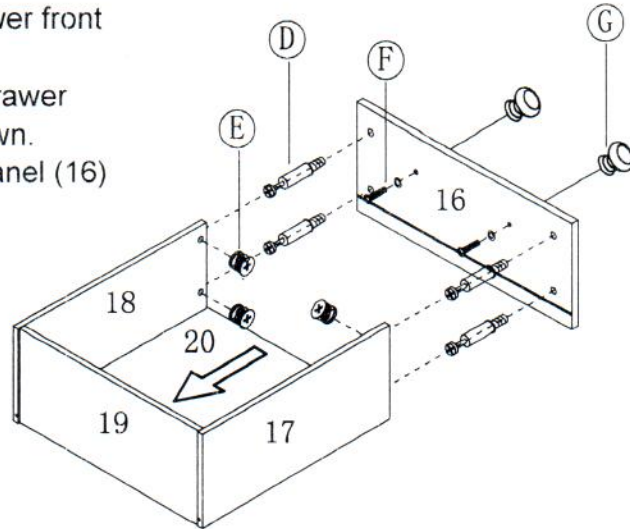
REFE TO PAGE 3 FOR CAMBOLT/CAMLOCK INSTRUCTION

Step4

1. Attach dowels (K) and cambolts (S) into leg post(5,6).
2. Attach side panels (3,4) to leg posts (5,6) using small camlocks (T) as shown,using care not to overtighten.
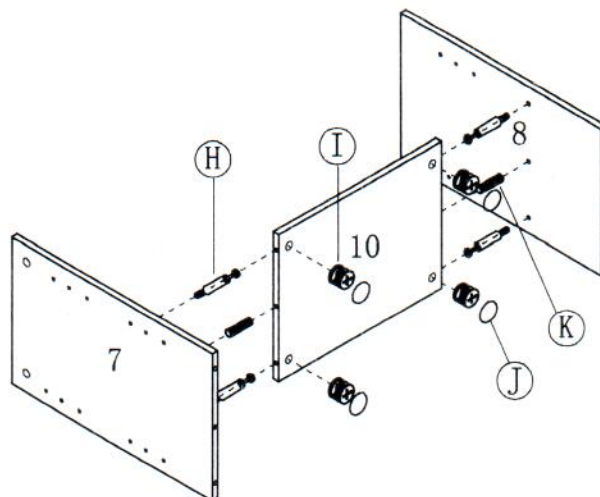3. Place small sticker over holes.
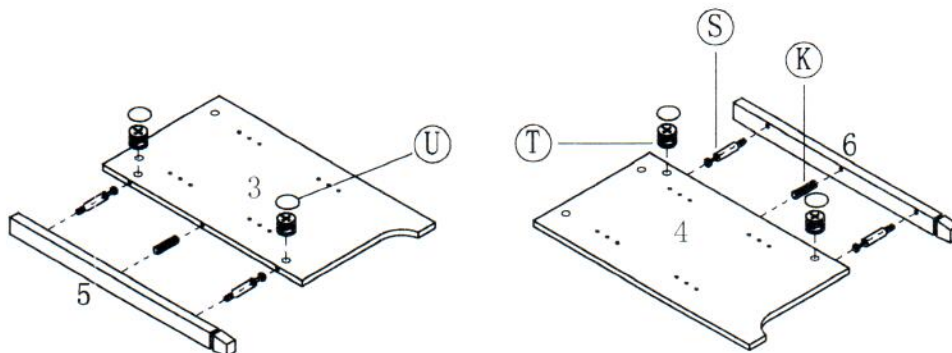
Step5

1. Insert dowel (K) and cambolts(H) into bottom support (11).
2. Attach bottom support (11) to bottom panel (2) using small camlocks (I) as shown.
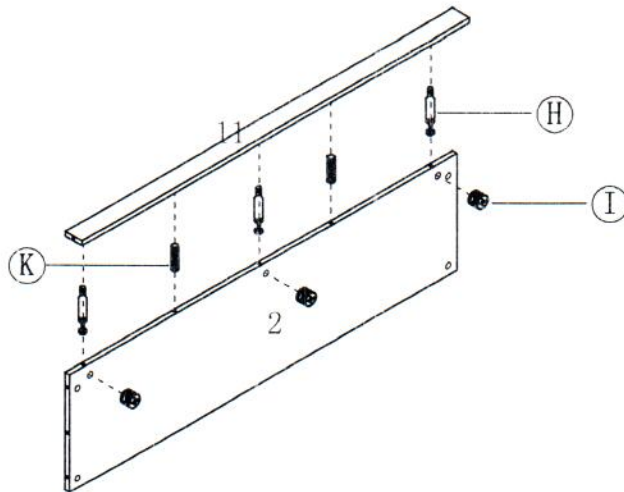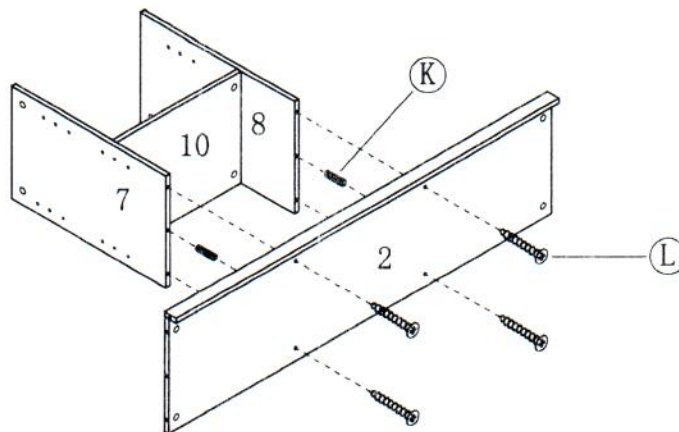
Step6

1. Insert dowels (K) and cambolts (H) into divider panel (7,8).
2. Attach fixed shelf (10) to divider panel (7,8) using small camlocks (I) as shown.
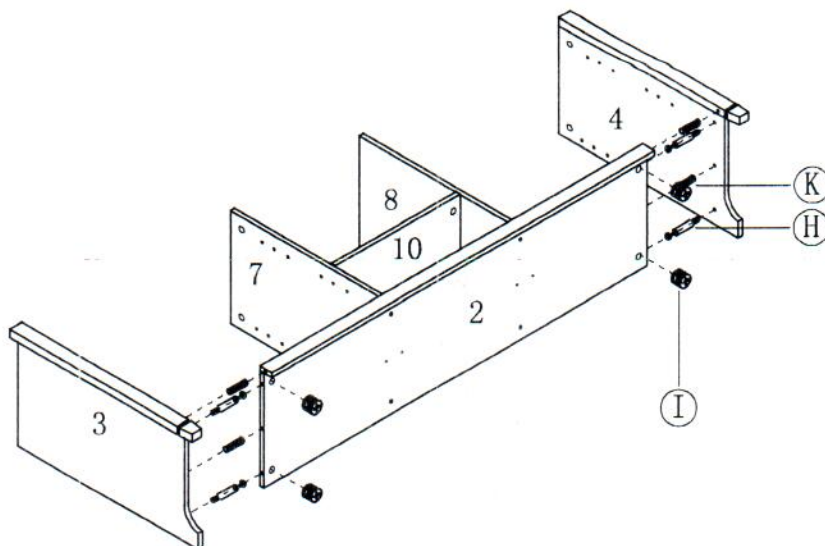3. Do not overtighten camlocks.

Step7

1. Lightly glue dowels (K) and insert into bottom panel (2).
2. Attach bottom panel (2) to assembly (divider panel 7,8) using screws (L) as shown.
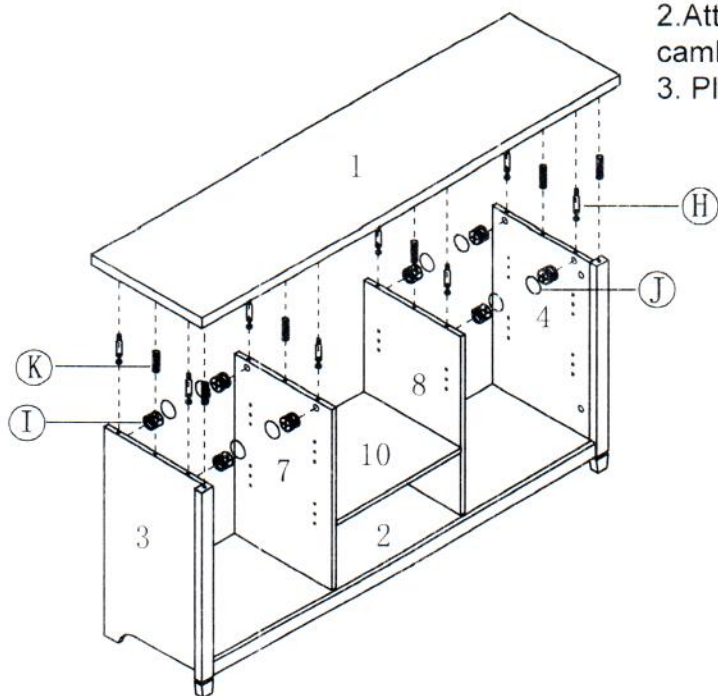
Step8

1. Lightly glue dowels (K) and insert into side panel (3,4). Attach cambolts (H) into side panel (3,4).
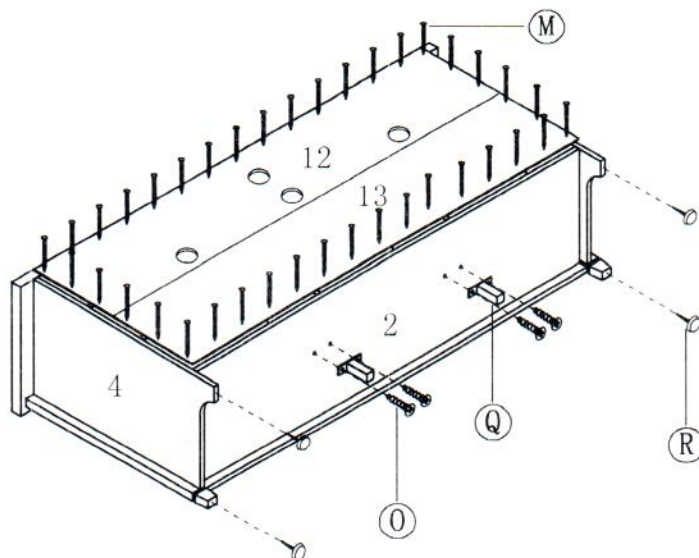2. Attach side panel (3,4) to assembly (2) using camlocks (I) as shown.

Step9

1. Insert dowels (K) and cambolts (H) into top panel (1).
2. Attach top panel (1) to assembly using camlocks (I) as shown.
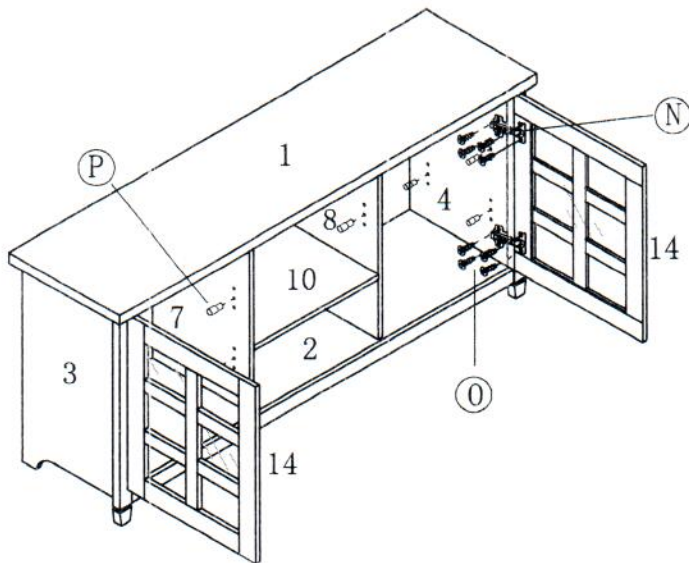3. Place sticker over holes.

Step10

1. Attach back panel to the TV stand using nails (M) as shown.
2. Attachs metal leg (Q) to bottom panel as shown.
3. Tap foot pins to leg post and side panel as shown.

Step11

1. Insert shelf pin (P) into holes as shown.
2. Attach hinge (N) to door frame and side panel using screws (O) as shown.

Step12

Attach knob to drawer front and door frame using screws and washers (F) as shown.