



**E L L E**  
D E C O R

*Chair*

**ASSEMBLY INSTRUCTIONS**

## *Guidelines*

Thank you for selecting an Elle Decor Collection piece. Our primary objective is to provide fast, friendly customer service to all of our customers. We are here to help if you have any questions, comments, or are in need of warranty replacement parts.

Please call us toll free at: 1-855-372-2315 U.S.  
0-800-051-6775 U.K.

U.S. Monday - Friday 6:00am - 5:00pm PST  
U.K. Monday - Friday 2:00pm - 1:00am GMT  
Or visit our website:  
**[www.trueinnovations.com](http://www.trueinnovations.com)**

### **FAILURE TO FOLLOW THESE WARNINGS WHEN IN USE COULD RESULT IN INJURY**

- Do not stand on the item or use as a step ladder.
- Do not use this item unless all bolts and screws are firmly secured and fastened.
- Check all bolts and screws every 90 days. Tighten as necessary if any are loose.
- Lift up then move. Pushing over or dragging this product can result in an injury or cause damage to the floor and piece.

### *Pre-Assembly Preparation:*

Please read through this instruction booklet before beginning assembly of this item.

*Two adults are recommended for assembly.*

- Clear space for assembly and lay out all parts on Parts List. Extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children and pets until fully assembled.
- Please check for any loose screws and tighten them before you use.

---


**WARNING:** DO NOT LET  
CHILDREN PLAY IN OR  
AROUND THE UNIT  
DURING ASSEMBLY  
DUE TO THE POSSIBLE  
RISK OF INJURY.

---

## Parts List




Ⓐ Casters (5)

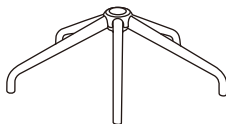


Ⓑ Base (1)




Ⓒ Gas Lift (1)

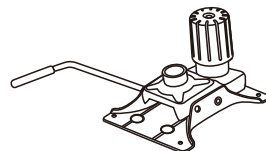

Ⓓ Seat Plate (1)

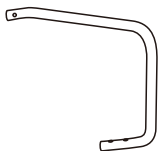


Ⓔ1 Left Arm (1)

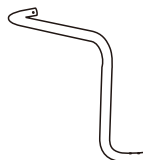

Ⓔ2 Right Arm (1)



Ⓕ Seat Cushion (1)

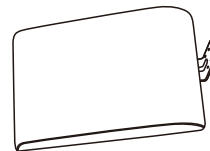

Ⓖ Back Cushion (1)



Ⓗ Screws (4)



Ⓘ Screws (4)





Ⓙ Screws (6)



Ⓚ Allen Key (1)


**Step 1--** Place the star base (B) upside down and insert 5 casters (A) into the holes on the star base (B). Turn the star base (B) over and insert the gas lift (C) through the center hole on top of star base (B).

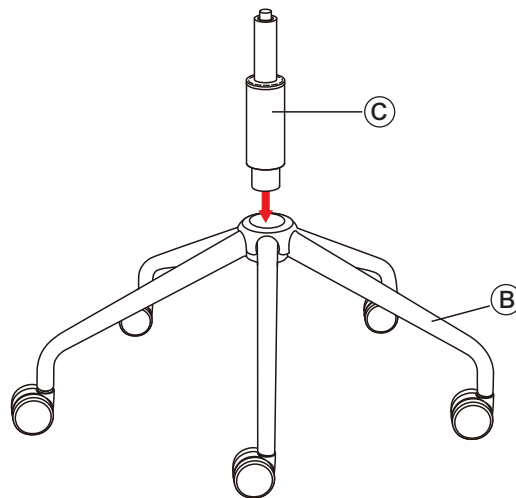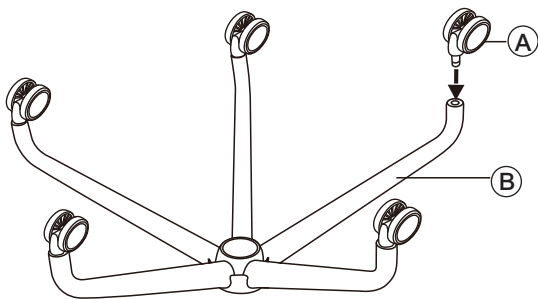

## Step 2--


Attach seat plate (D) to the bottom of the seat cushion (F) (with the front of the seat plate facing the front of seat cushion). Attach by using four screws (H) for the holes of the seat plate (D) and tighten the screws using allen key (K).

\*Note: Tighten the screws completely.

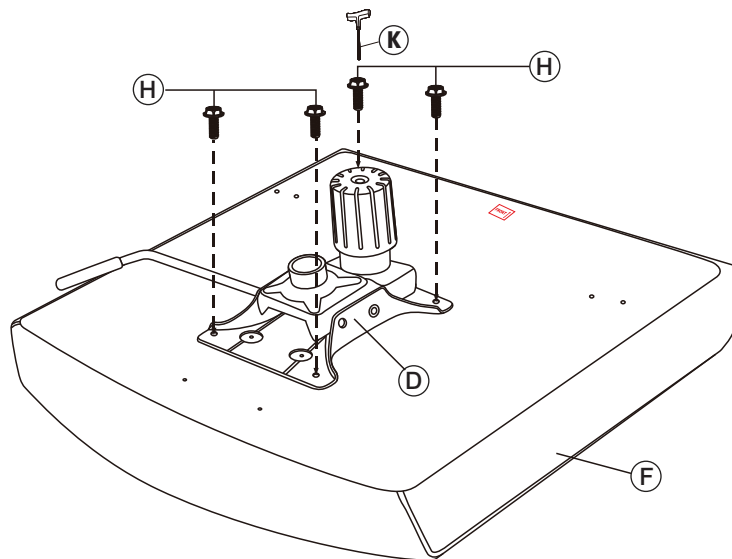


**Step 3--** Align the back cushion (G) with the seat cushion (F) and attach the back support plate onto the bottom of the seat cushion (F) by using screws (I).

\*Note: Do not tighten the screws completely.

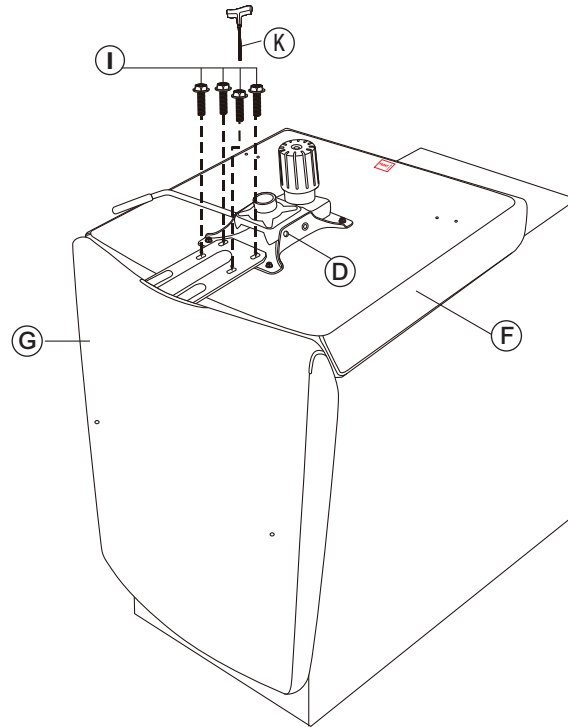


**Step 4--** Attach the arms (E1 & E2) (with the front of arms facing the front of seat cushion) to the bottom of the seat cushion (F) by using four screws (J).  
\*Note: Do not tighten the screws completely.

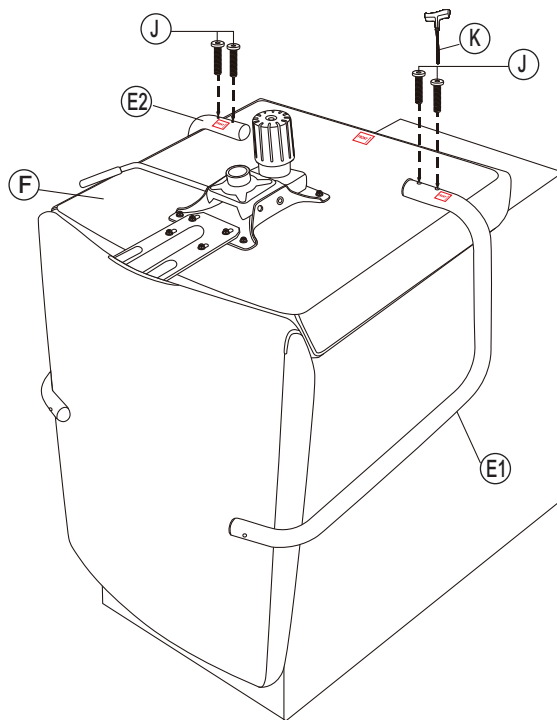



**Step 5--** Attach the arms (E1 & E2) to the back cushion (G) by using two screws (J).  
\*Note: Tighten the screws completely. Remember to tighten the back support plate screws.

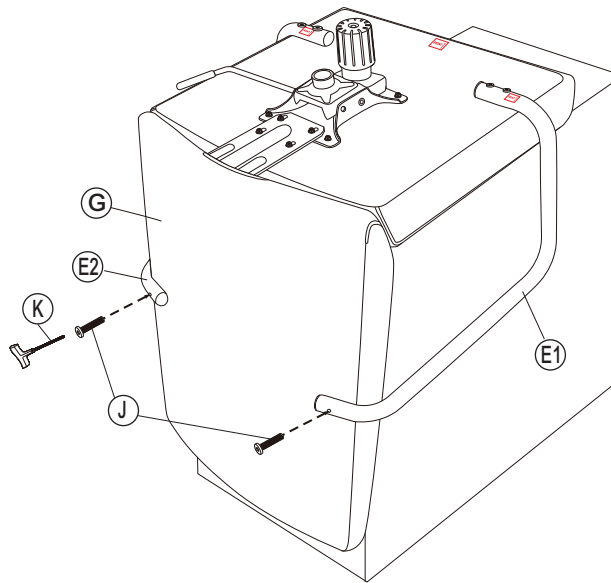


**Step 6--** Position the assembled chair upright with the seat plate (D) facing down. Insert the gas lift (C) into the center hole of the seat plate (D) and press down until fully engaged.



## Operating Instructions

### Function Instruction - 1 To Adjust Seat Height:


While seated, lean forward and reach under the right side of the chair to find the handle. Lift the handle and raise your body up slightly to allow the chair to rise to the desired height. Once desired height is reached, release handle to lock chair at desired height. To lower the seat, lift the handle while seated. The chair will descend until the handle is released or the chair reaches the bottom position.

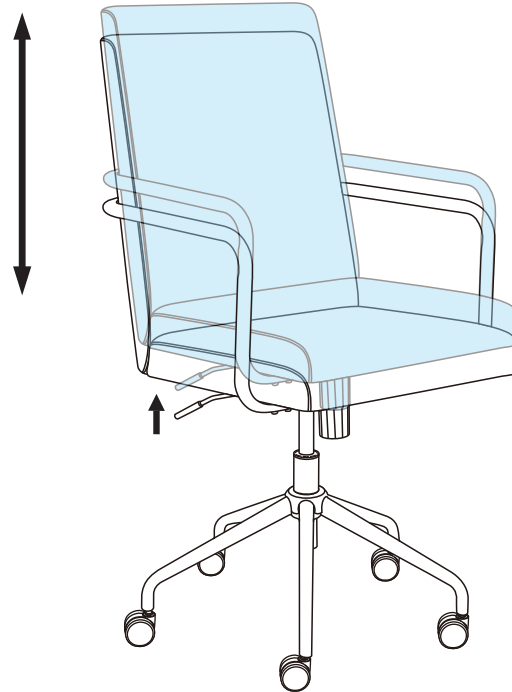

## Function Instruction - 2

### To Operate Tilt Lockout:


While seated, reach under the right side of the chair to find the height-adjustment handle. Pull the handle all the way out (away from the gas lift) to allow the chair to tilt backwards. To lock the chair in the upright or vertical position, sit upright and push the handle in towards the gas lift.

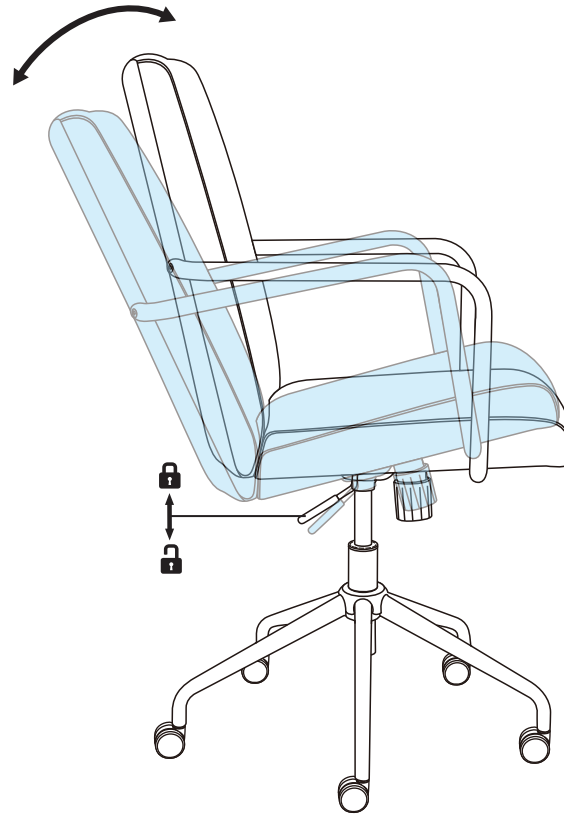


### **Function Instruction - 3**

#### **To Adjust Tension on the Tilt:**

Reach under the front center of the chair, grasp the round knob (R) and turn it counter-clockwise to stiffen the tilt mechanism for a heavier user. Turn the knob (R) clockwise to loosen the tilt mechanism for a lighter user. Rotate the knob (R) until the desired resistance is reached.

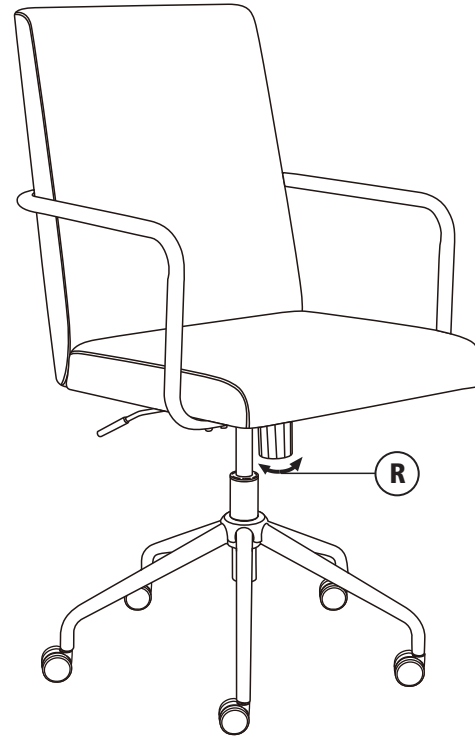

**Function Instruction - 4**  
**360° Swivel:**  
360° seat swivel.

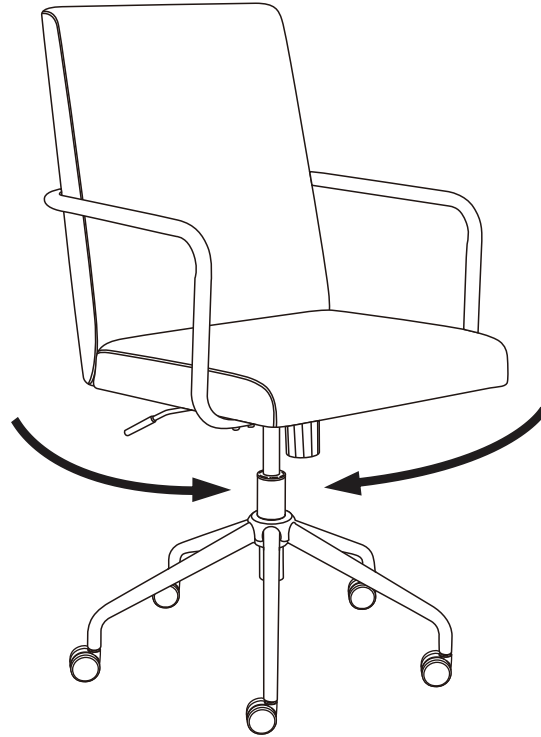

## *Limited Warranty*

The product you have purchased is warranted against defects in material and workmanship while owned by the "Original Purchaser". The term "Original Purchaser" is defined as that party or entity which purchases these products from an authorized dealer or retailer as shown by the original sales receipt. This warranty does not apply to "as is" or previously owned products.

The manufacturer warrants its products to be free from defects in materials and workmanship (normal wear and tear, fading and stretching excepted), for one year from the date of purchase, except as provided below under the limited warranty.

This warranty gives you specific rights, and you may also have other rights, which vary from state to state (or country to country). All warranties are limited to the original purchaser for normal use by a maximum of two users. Total weight capacity per chair is 275 pounds for a single user.

### **The exceptions or exclusions to this warranty are:**

- Upholstery material and foam cushion material is warranted against defects in material and workmanship for a period of one year, beginning on the date of purchase as shown on the original sales receipt.
- Any warranty claim that is submitted after the limited warranty period, or without proper proof of purchase will not include the cost of parts, labor, or delivery on the warranted parts within a reasonable amount of time. We reserve the right to require damaged parts to be returned to us upon request. Natural markings such as scars, brands, grain variations, wrinkles, color variations, etc. will be considered normal characteristics and not construed as defects.
- For claims or questions concerning this warranty, please contact the Customer Service Department at [www.trueinnovations.com](http://www.trueinnovations.com). Be prepared to provide your name, address, daytime phone number, the model and purchase order number of the product, date of purchase, and the store where it was purchased. The manufacturer requires that the original sales receipt be submitted with all requests to confirm that you are the Original Purchaser according to our written warranty.

