ADJUSTABLE BED FRAME OWNER'S MANUAL

CONTENTS

01.	SAFETY	03
02.	INTRODUCTION	08
03.	BOX CONTENTS	10
04.	ASSEMBLY	12
05.	DISASSEMBLY AND TRANSPORTATION	19
06.	OPERATION	20
07.	CLEANING AND MAINTENANCE	24
08.	TROUBLESHOOTING	25
09.	TECHNICAL DATA	27
10.	FINAL DISPOSAL	27



COPYRIGHT

This original documentation is protected by copyright. All rights, especially the rights to translate or reproduce the document, are reserved. No part of this manual may be reproduced mechanically, electronically, or by other means, in any form, without prior written permission of the company. Violations involving copyright may result in legal action.

1. SAFETY

IMPORTANT SAFETY INSTRUCTIONS

This Owner's Manual was designed according to the UL 962 Standard for Household and Commercial Furnishing. It contains safety instructions. All users must read the Owner's Manual. All users have a responsibility to observe the safety instructions. Important accident prevention advice is found in this chapter.

This Class B digital apparatus complies with Canadian ICES-003. *Cet appareil numerique de la classe B est conforme a la norme NMB-003 du Canada.*

GENERAL SAFETY INFORMATION

The following safety regulations and obligations are valid when handling the system:

- Do not operate the product unless it is in full working order
- Do not remove, change, bridge, or bypass any protection or safety features
- Do not convert or modify the Adjustable Bed Frame without written approval
- Do not use unauthorized spare parts for repair
- Only physically able adults are allowed to assemble the product
- Do not attempt to change or replace parts unless the product is in a de-energized state
- . Ensure that no children or animals are in the proximity of the Bed Frame when operating it
- Ensure nothing obstructs the Bed Frame's range of motion (e.g. night stands or open windows)
- Do not sit directly on any Platform when operating the Bed Frame. Distribute your weight evenly

INTENDED USE

The Adjustable Bed Frame is an electrically controlled Bed Frame. Its sole intended use is described in this documentation. The Adjustable Bed Frame is designed for indoor use and household use only. Outdoor use is forbidden. The Bed Frame is operated by a Remote Control.

HOSPITAL/MEDICAL DISCLAIMER

The Adjustable Bed Frame is not designed to comply with medical or hospital standards. It is therefore not suitable for domestic or commercial medical use.

- Do not use the Bed Frame near to tent type oxygen or therapy equipment
- Do not use the Bed Frame near to other potentially explosive gases

The Adjustable Bed Frame may only be used with suitable mattresses. Suitable mattresses must comply with Federal Register 16 CFR Part 1633. If unsure, ask your mattress provider if your mattress is compatible with electrically adjustable Bed Frames. The Bed Frame must not be used without a mattress, or with water-based mattresses. The Bed Frame may only be assembled and used by adults. It is not designed for children or animals.

The recommended maximum load on the Bed Frame is 1000 lbs (including the mattress). Weight must be distributed evenly. No individual Platform is designed to support or lift this weight. Users should get in and out of bed only when the Bed Frame is in a flat (horizontal) position. Do not place your entire weight on the head or foot section, especially if the Bed Frame is in an elevated position. Do not stand on the Bed Frame or Platforms at any time. Exceeding the recommended maximum load could damage the product and void the warranty.

Usage outside of the intended use described in this Owner's Manual is only allowed with written consent by us. Improper operation or usage outside of the intended use can re-sult in personal injury and damage to the system. Liability and warranty claims are void in cases of usage outside of the intended use.

REASONABLY FORESEEABLE MISUSE

Reasonably foreseeable misuse with the Adjustable Bed Frame includes, but is not limited to:

- Using the Bed Frame as a climbing aid
- Jumping on the Bed Frame
- Allowing children or animals to climb on or under the Bed Frame
- Using the Bed Frame without a mattress or with a water-based mattress
- Overloading the Bed Frame (max. load is 1000 lbs evenly distributed)
- Continuous use of the Bed Frame (see below)

The Bed Frame is not designed for continuous operation. If the motors are overworked, the Bed Frame will time-out automatically for several minutes. During this time, you will not be able to operate the Bed Frame. Continued excessive use of the Bed Frame can damage the product.

- Do not operate the Bed Frame continuously
- If the time-out is reached, do not operate the Bed Frame for at least 6 minutes. This will reset the time-out

TARGET AUDIENCE

This Manual is addressed to all adults responsible for assembling the Bed Frame, who:

- Have (at least) basic technical knowledge
- Are physically able to lift the components
- Have fully read and understood this Owner's Manual

EXPLANATION OF SYMBOLS AND SIGNAL WORDS

A DANGER

The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

ACAUTION

The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

The signal word NOTICE indicates a situation that will not lead to personal injury, but could lead to damage to the product or the environment.

RESIDUAL RISKS

Residual risks are the risks that remain after all relevant safety standards have been complied with. These have been evaluated through a thorough risk assessment. Read all instructions before assembling and operating the Bed Frame.

A DANGER

To reduce the risk of electric shock:

• Always unplug the Bed Frame from the electrical outlet before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- Unplug the Bed Frame from the outlet before putting on or taking off parts.
- Close supervision is necessary when the Bed Frame is used by, or near children, invalids, or disabled persons.
- Use this Bed Frame only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate the Bed Frame if it or any parts have a damaged Cable or Plug, are not working properly, have been dropped or damaged, or dropped into water. Return the bed for examination and repair or replace it.
- Keep all Cables away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate the Bed Frame where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect the Bed Frame, turn all controls to the off position, then remove plug from outlet.
- WARNING: Risk of injury keep children away from the extended foot support (or other similar parts).
- **WARNING:** Risk of electric shock –connect this furnishing to a properly grounded outlet only. See Grounding Instructions.

WARNING

Moderate risk of death or serious injury

The Adjustable Bed Frame can withstand a maximum load of 1000 lbs (evenly spread, including mattress). Overloading the Bed Frame, or any single Platform, may lead to death or serious injury.

- Do not overload the Bed Frame under any circumstances
- Do not stand on the Bed Frame
- Do not apply the maximum load to the Foot or Head Platforms
- Do not sit on the mattress while the Bed Frame is in motion. Distribute your weight evenly



Moderate risk of death or serious injury

Opening electrical components, or attempting improper conversions or modifications to electrical or mechanical components on the Bed Frame may lead to death or serious injury.

- Do not convert or modify the Adjustable Bed Frame
- Never open electrical components

A WARNING

Moderate risk of death or serious injury through crushing

Crawling, laying, or reaching underneath the Bed Frame may lead to death or serious injury through crushing.

• Do not crawl, lay, or reach underneath the Bed Frame

WARNING

Moderate risk of death or serious injury in explosive atmospheres

Operating the Adjustable Bed Frame in potentially explosive atmospheres may lead to death or serious injury through explosions.

- · Read the relevant directives to determine whether an atmosphere is potentially explosive
- Do not operate the Adjustable Bed Frame in potentially explosive atmospheres

A WARNING

Moderate risk of death or serious injury through crushing

When the Bed Frame moves to a new position, it is possible that persons will be crushed between the Bed Frame and foreign objects. This may lead to death or serious injury.

- Do not store foreign objects underneath the Bed Frame
- Ensure nothing obstructs the Bed Frame's range of motion (e.g. night stands or open windows)

A WARNING

Moderate risk of death or serious injury to children

Misuse of the Bed Frame around children may lead to death or serious injury.

- Activate the Child Lock when children are present
- Keep children away from moving Platforms
- Do not allow children to play with the Bed Frame

SAVE THESE INSTRUCTIONS

2. INTRODUCTION

PREFACE

With the Adjustable Bed Frame, every effort has been made to ensure your comfort and safety. Each Bed Frame is rigorously tested to comply with all relevant safety standards and their requirements.

This Owner's Manual is intended to enable persons to assemble and operate the Bed Frame safely. However, incorrect installation of the product, or usage outside of the intended use described in this Owner's Manual may lead to hazardous situations. In Chapter 1, "Safety", and throughout this Owner's Manual, potential risks, their consequences, and steps to avoid harm are explained.

Observing the safety instructions in this Owner's Manual will help you to avoid hazards and minimize damage to the system. All persons involved in the assembly of the system must have the full product documentation available to them at all times. Product documentation consists of this Owner's Manual and any other relevant documents supplied by the manufacturer. Documentation must always be kept complete and legible.

LIABILITY

The descriptions of product characteristics in this Owner's Manual are not a guarantee of the presence of these characteristics. We are not liable for damage or injury caused by:

- Improper product use
- Disregard of the documentation
- Unauthorized product alterations
- Improper work on and with the Adjustable Bed Frame
- Operation of damaged products
- Improperly performed repairs
- Unauthorized changes to the operating parameters
- Disasters, external influence, and force majeure

We assume no liability for technical or printing errors, for deficiencies in this documentation, or for damages caused directly or indirectly by the delivery, performance, or usage of this documentation.

FCC STATEMENT

The Radio Frequency for this product is 2.4 GHz

FCC COMPLIANCE


The Adjustable Bed Frame complies with FCC CFR 47 Part 15 Subpart B/C. Operation is subject to the following conditions:

- 1. The product may not cause harmful interference
- 2. The product must accept any interference received, including interference that may cause undesired operation

To comply with the FCC RF exposure compliance requirements, you may not make any changes to the product or the antenna. Changes to the antenna or the product could result in the product exceeding the RF exposure requirements. This may void your authority to use the product.

ELECTRICAL GROUNDING INSTRUCTIONS


This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch A (see below). A temporary adapter that looks like the adapter illustrated in sketches B and C can be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

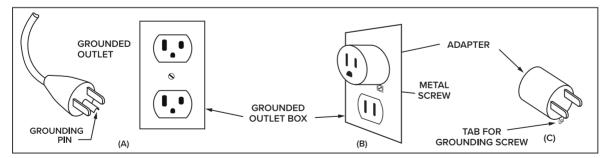


This product is double-insulated. Servicing a double-insulated product requires extreme care and knowledge of the system, and is to be done only by qualified service personnel. Replacement parts for a double-insulated product must be identical to the parts they replace. A double-insulated product is marked with the words "DOUBLE INSULATION" or "DOUBLE INSULATED". The symbol (square within a square) may also be marked on the product.


3. BOX CONTENTS

The Adjustable Bed Frame is delivered in two boxes. The boxes contain all the parts and tools necessary to fully assemble and operate the system. Upon opening the packaging, use this checklist to ensure all the parts are present and in perfect condition. If any part is damaged or missing, contact us. You can find the relevant contact details at the beginning of the Owner's Manual. Ensure that the boxes are stored in a flat position in a dry place at room temperature.

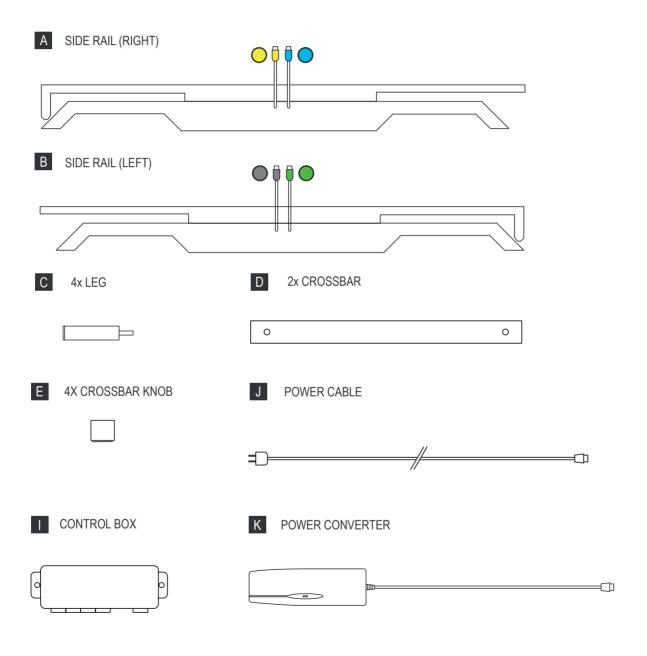

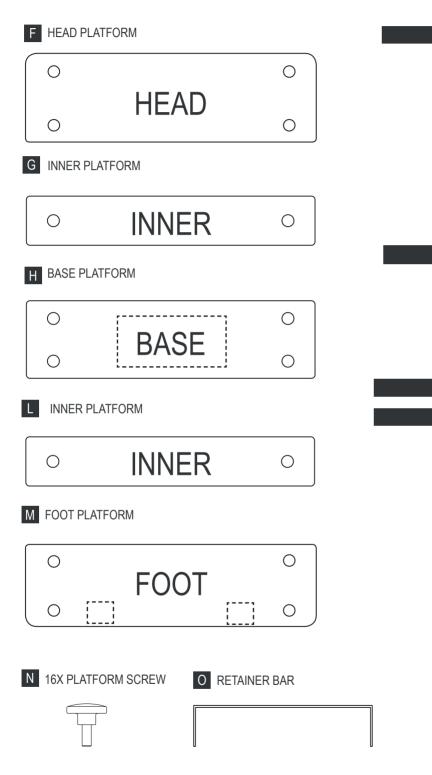





2x AAA BATTERIES



QUICK START GUIDE

OWNER'S MANUAL

4. ASSEMBLY

TOOLS AND EQUIPMENT

The Adjustable Bed Frame should be assembled by two adults. If you assemble the Bed Frame alone, be careful when lifting heavy parts. Ensure the assembly area is larger than the Bed Frame. Follow the steps carefully to assemble the Bed Frame correctly.

UNPACKAGING

Lay the packaging flat on the ground, ensuring it is the right way up (see notices on the packaging). Carefully open the packaging and check its contents, as described in Chapter 3, "Box Contents".

WARNING

Moderate risk of death or serious injury to children and animals

The plastic packaging of the Bed Frame is a potential suffocation hazard. Leaving children or animals unsupervised with the empty packaging may lead to death through suffocation.

- Do not leave children or animals unsupervised
- Dispose of unnecessary packaging immediately

Ensure all parts are at room temperature. Parts that are too cold or hot may affect assembly.

Do not use a knife or a sharp object to unpackage the Bed Frame. This may damage the product.

Placing the parts directly onto a hard floor may cause damage to the floor or the parts themselves.

Use the cardboard packaging material to cushion the impact and avoid damage.


ACAUTION

Risk of minor or moderate injury through cutting

Contact with sharp edges may lead to minor or moderate injury through cutting.

Avoid contact with sharp edges

STEP 1: ATTACHING THE LEGS

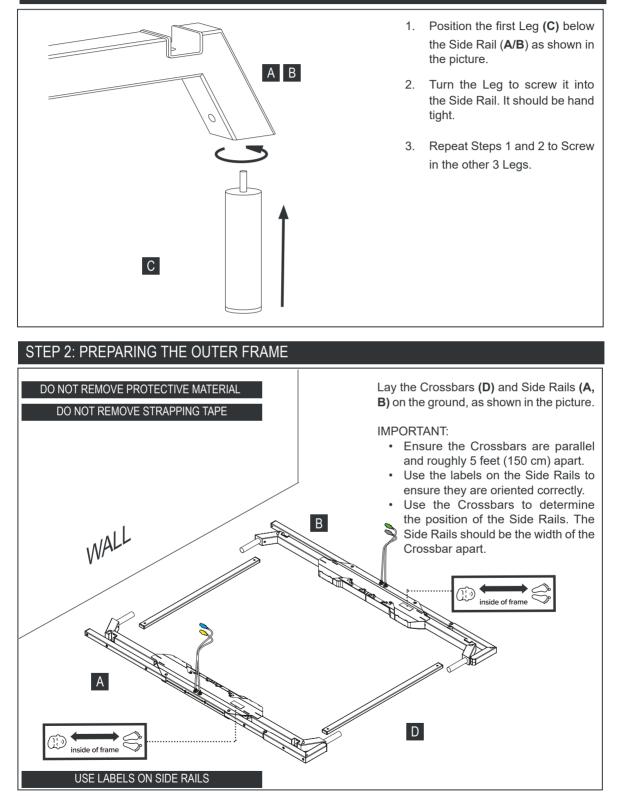


STEP 3: CONNECTING THE BARS


ACAUTION

Risk of minor or moderate injury through crushing

The Side Rails are not secured while they are standing alone. If they fall over, this may lead to minor or moderate injury through crushing.

- Do not attempt to stand the Side Rails upright before they are connected to the Crossbars
- Be careful not to knock over the Side Rails
- Ensure that you are wearing suitable footwear while assembling the Bed Frame

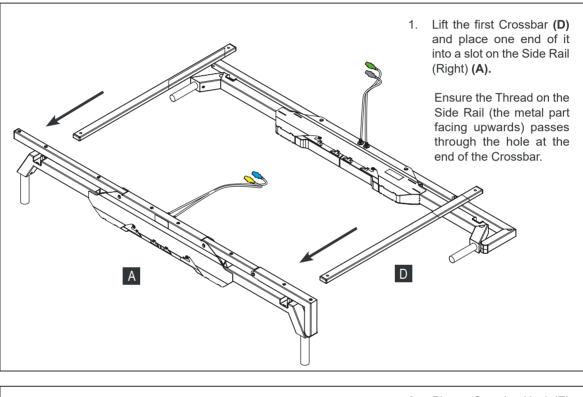


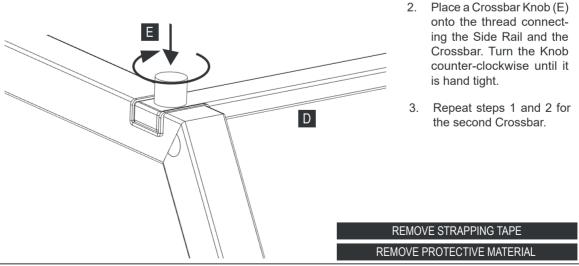



Risk of minor or moderate injury through crushing

Gripping the Side Rails' moving parts may lead to minor or moderate injury through crushing.Do not touch moving parts when lifting or moving the Side Rails. Only grip the fixed parts

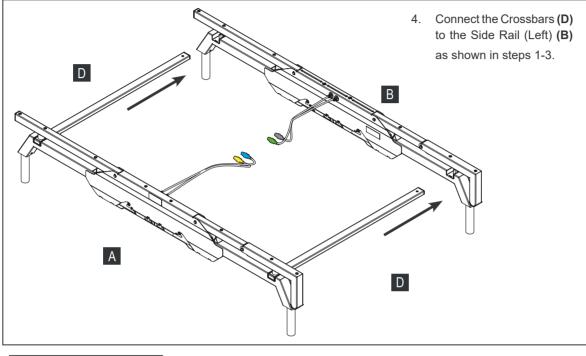


ACAUTION

Risk of minor or moderate injury through crushing

While screwing in the Crossbar Knobs, you will need to lift the moving parts of the Side Rails. Allowing these parts to fall may lead to minor or moderate injury through crushing.

Ensure moving parts do not fall down during assembly

STEP 4: CONNECTING THE CABLES

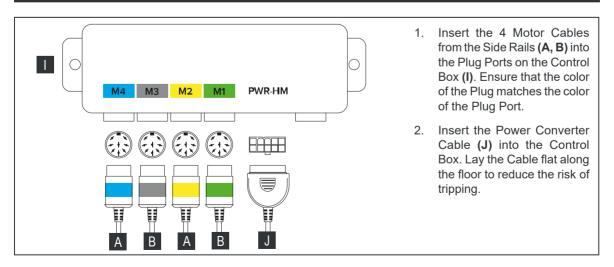


STEP 5: MOUNTING THE BASE PLATFORM


ACAUTION

Risk of minor or moderate injury through tripping


While mounting the Platforms, you may have to step over the Power Cable. Tripping over the Cable may lead to injury.


• Be careful not to trip over the Cable

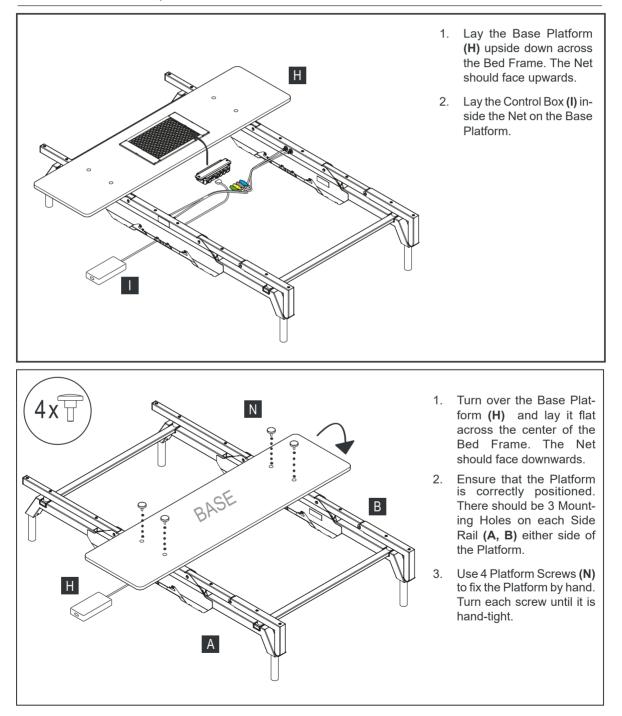

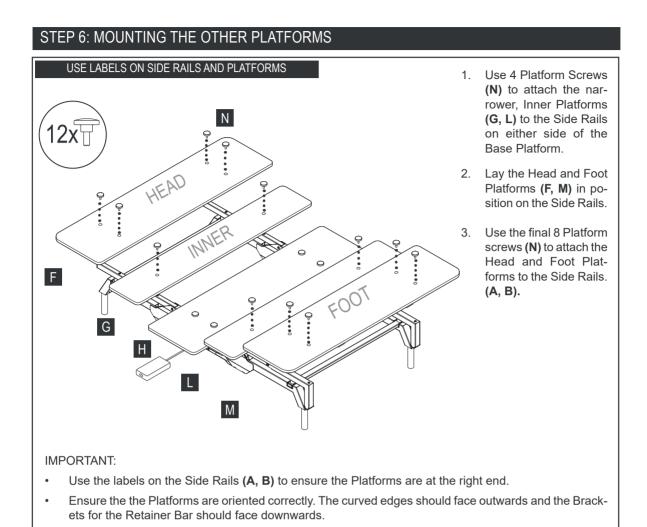

STEP 7: ATTACHING THE RETAINER BAR

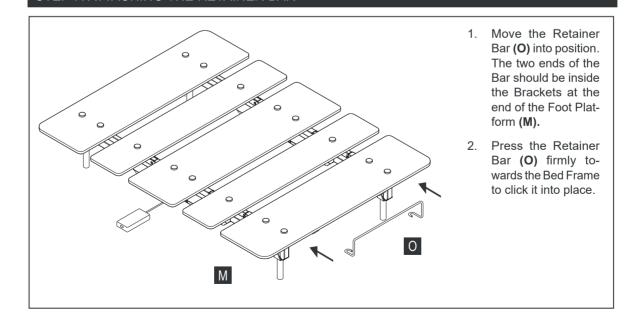

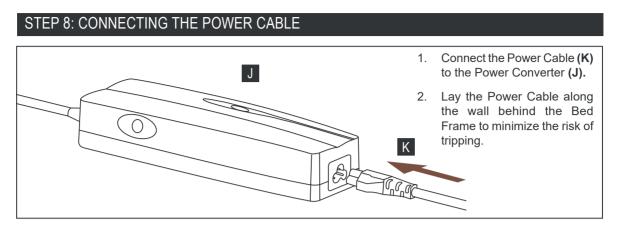


Stretching the Power Cable may damage it. This may lead to malfunctions with the Bed Frame.

Ensure the Cable is plugged into the mains properly. Bad connections can damage the system.

If the Bed Frame is too close to the wall (or touching it), it may collide during movement. To avoid damage to the Bed Frame and the wall, ensure a small distance is kept.

STEP 9: INSERTING THE BATTERIES

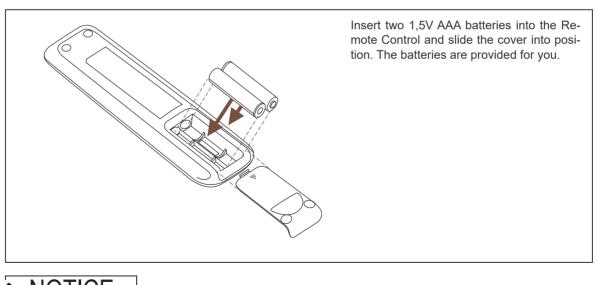

NOTICE

Replace the batteries in the Remote Control once a year. Do not use rechargeable batteries.

5. DISASSEMBLY AND TRANSPORTATION

DISASSEMBLY

To disassemble the Adjustable Bed Frame, you must first disconnect the Bed Frame from the mains. Then, follow the assembly instructions in reverse order. To minimize the risk of pinching when transporting the Side Rails, secure all moving parts with packaging tape.

TRANSPORTATION

After it has been fully assembled, the Bed Frame should only be moved short distances within the same room. Lifting the Bed Frame requires two people. To lift the Bed Frame:

- 1. Ensure that the Bed Frame has first been moved to the Sleeping Position.
- 2. Stand at opposite sides of the Bed Frame (long sides) and grip the Base Platform.

ACAUTION

Risk of minor or moderate injury through crushing

Tilting the Bed Frame when lifting or moving the Adjustable Bed Frame may lead to minor or moderate injury through crushing.

- · Keep the Bed Frame level while lifting or moving it
- Do not attempt to lift or move the Bed Frame alone


Moving the Bed Frame on its side or upside down may lead to damage to the product.

- Only move the Bed Frame while it is in horizontal position (Platforms facing upwards)
- Disassemble the Bed Frame before moving it to a different location

6. OPERATION

REMOTE CONTROL

Each Adjustable Bed Frame is supplied with a Remote Control. Your Remote Control allows you to operate the Bed Frame from a distance of 23 feet (7 m). The Remote Control supplied with your product depends on the model you have ordered. Your Remote Control may include the following:

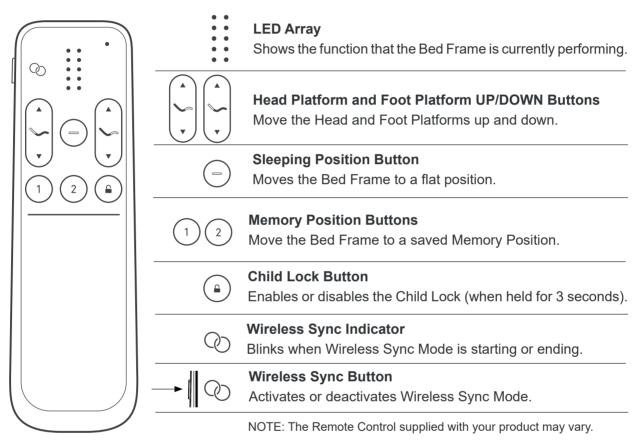

Pressing too many Buttons in a short space of time can cause damage to the system.

Wait one second between pressing different Buttons

ACAUTION

Risk of minor or moderate injury to children

Misuse of the Remote Control by children could lead to minor or moderate injury.

- Activate the Child Lock when children are present
- In Wireless Sync Mode, ensure the Child Lock feature is activated on both Remote Controls
- Do not allow children to play with the Remote Control

PAIRING THE REMOTE CONTROL

You must pair the Bed Frame to a Remote Control before operation. Ensure the Bed Frame has been unplugged for at least 10 seconds, then proceed as follows:

- 1. Plug the Bed Frame into the mains. This will automatically switch it to Pairing Mode for 30 seconds. In this time, the Bed Frame will search for Remote Controls to be paired with.
- 2. During Pairing Mode, press any Button. This will pair the Remote Control to the Bed Frame.



Risk of minor or moderate injury

Multiple Bed Frames may be in range of your Remote Control. Operating the wrong Bed Frame may lead to minor or moderate injury.

- Ensure the Remote Control is paired to the correct Bed Frame
- Ensure the Remote Control has been safely unpaired before using it on another Bed Frame

UNPAIRING THE REMOTE CONTROL



1. Press and hold the Head and Foot Platform UP Buttons for at least 15 seconds.

2. Test the Remote Control to check that it has been safely unpaired.

MOVING THE BED FRAME UP AND DOWN

You can use the UP and DOWN Buttons to move the Head and Foot Platforms up and down:




- 1. Press and hold the UP or DOWN Button for the Platform you wish to adjust
- 2. Wait until the Bed Frame has reached the desired position
- 3. Release the UP or DOWN Button

The Bed Frame will move until the Button is released or the highest / lowest position is reached.

SAVING A MEMORY POSITION

There are two pre-saved Memory Positions: Anti-Snore (Position 1) and Zero Gravity (Position 2). Press the Memory Position Buttons on the Remote Control to move to these positions. You can change saved Memory Positions to new Memory Positions. To do this, proceed as follows:



- 1. Press and hold the UP or DOWN Button for the Platform you wish to adjust
- 2. Wait until the Bed Frame has reached the desired position
- 3. Release the UP or DOWN Button
- 4. Press and hold the Button for the new Memory Position for at least 3 seconds
- 5. Release the Memory Position Button to save the position

PERFORMING A FLAT POSITION RESET

To perform a Flat Position Reset, press the **Sleeping Position Button** for at least 15 seconds, then:



- 1. The Remote Control displays "F" to confirm the input.
- 2. Press and hold the Sleeping Button again to move the bed to the flat position
- 3. The Reset is complete
- If two beds are in Wireless Sync Mode, turn off Wireless Sync and reset each bed separately.

MOVING THE BED FRAME TO A SAVED MEMORY POSITION

Proceed as follows to move the Bed Frame to a saved Memory Position:



- Press the Memory Position Button for the Memory Position you wish to move to (for less than three seconds)
- 2. Wait for the Bed Frame to move to the saved Memory Position

MOVING THE BED FRAME TO THE SLEEPING POSITION

The Sleeping Position is the Bed Frame's lowest position. While in the Sleeping Position, all Platforms are horizontal. Proceed as follows to move the Bed Frame to the Sleeping Position:

- 1. Press the Sleeping Position Button (do not hold the Button)
- 2. Wait for the Bed Frame to move to the Sleeping Position

ACTIVATING THE CHILD LOCK

Always activate the Child Lock when children are near the Bed Frame. Proceed as follows:



- 1. Press and hold the Child Lock Button for at least three seconds
- 2. Ensure that the LED Array shows "L". This means the Child Lock is active
- 3. To de-activate the Child Lock, press and hold the Child Lock Button for at least three seconds

WIRELESS SYNC MODE

IMPORTANT

Wireless Sync Mode allows you to control two Bed Frames with one Remote Control. If you only have one Bed Frame, or if your Remote Control does not support Wireless Sync, continue reading at the next chapter.

Before you activate Wireless Sync Mode, please ensure:

- Both Bed Frames are standing next to each other
- The Bed Frames will not collide with each other when moving
- Each Bed Frame can be controlled using its own Remote Control



Wireless Sync is designed to work with two Bed Frames. Connecting more will damage the system.

To activate Wireless Sync Mode:



- Press the Wireless Sync Button on both Remote Controls (on the left side of the Remote Control) simultaneously for 3 seconds
 - 2. Ensure that the Wireless Sync Indicator on both Remote Controls blinks for
 - 5 seconds. When the blinking stops, the two Bed Frames have been paired
- If the Bed Frames do not move together, repeat the steps, making sure the Sync Indicator on both Remote Controls is blinking.
- If only one Remote Control operates both Bed Frames, deactivate Wireless Sync and repeat steps 1 and 2.
- If both Remote Controls are paired to the same Bed Frame, unplug the Power Converter of the unpaired Bed Frame until the LED on the Power Converter goes out. Then, plug the Power Converter back in. Press any Button on both Remote Controls to complete the pairing.

MOVING THE BED FRAME UP AND DOWN IN WIRELESS SNYC MODE



When Wireless Sync Mode is activated, pressing the UP and DOWN Buttons on either of the Remote Controls will move both Bed Frames simultaneously.

DEACTIVATING WIRELESS SYNC MODE

You only require one Remote Control to deactivate Wireless Sync Mode:



- 1. Press and hold the Wireless Sync Button on one Remote Control for 3 seconds
- 2. The Sync Indicator will blink for five seconds
- 3. When the blinking stops, the Bed Frames will be in Single Mode. If either Re-
- mote Control still operates both Bed Frames, repeat the procedure.

Wireless Sync Mode will remain active if the Bed Frame is unplugged and then plugged back in.

FIXING MISALIGNMENT

If two connected Bed Frames have different saved Memory Positions, pressing a Memory Position Button will cause the Bed Frames to move to different positions. This is called Misalignment. In this case, you must move both Bed Frames to their lowest position.

- 1. Press the Sleeping Position Button on one Remote Control
- 2. Wait for both Bed Frames to reach their lowest position
 - 3. The Bed Frames are realigned. Continue using the Bed Frame as normal.

7. CLEANING AND MAINTENANCE

CLEANING

To clean the Adjustable Bed Frame, use a dry or slightly damp lint-free cloth to wipe the Bed Frame.

▲ WARNING

Moderate risk of death or serious injury through electric shocks

Leaving the Bed Frame plugged in while cleaning it may lead to death or serious injury through electric shocks.

- Use only a dry or slightly damp lint-free cloth to clean the Bed Frame
- Do not allow any of the Bed Frame's components to become wet during cleaning
- Always unplug the Bed Frame from the mains before cleaning

Cleaning agents, such as non-alcohol based cleaners, sanitizers, and others can destroy the anodized layer of the Adjustable Bed Frame. Use only a dry or slightly damp lint-free cloth to clean the Bed Frame


MAINTENANCE

The Adjustable Bed Frame does not require maintenance. If the Bed Frame becomes damaged, or if you are experiencing technical difficulties, contact us.

8. TROUBLESHOOTING

BEHAVIOR	POSSIBLE CAUSE / SOLUTION			
Remote lights up but the Bed Frame does not re-	1. The Bed Frame is not connected properly. Check the power connection			
spond when Buttons are pressed.	2. Time-out has been reached due to continuous operation. Do not operate the Bed Frame for at least 6 minutes. This will reset the time-out.			
	 Unplug the Power Converter. Wait until the LED goes out, then plug it back in. 			
Remote does not light up. The Bed Frame does not respond when Buttons are pressed.	Replace the batteries in the Remote Control.			
Parts of the Bed Frame re- main in an elevated posi- tion after a power failure.	If power cannot be restored, an Emergency Lowering is required. Proceed as follows: 1. Unplug the Power Converter from the mains			


2. Remove the cover of the Power Converter (see below):

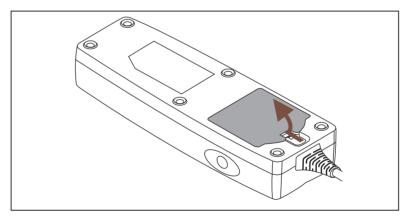

3. Insert two 9V batteries into the Power Converter. Do not use rechargeable batteries.

4. Make sure no heavy objects or any person is on the bed or in the range of moving parts.

5. Press the Button on the Power Converter until the Bed Frame reaches the flat position:

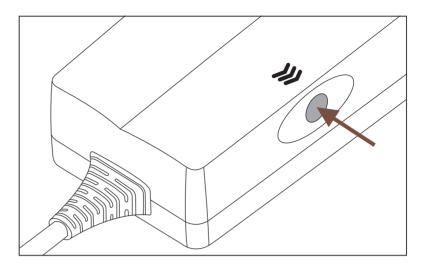

After this action, the batteries must be replaced. If you store batteries in the power supply as a backup, they must be replaced annually.

Remote Control defective or lost.	Press the Button on the Power Converter until the Bed Frame is in the Sleeping Position.		
Parts of the Bed Frame do not move evenly.	Make sure no persons or heavy objects are on the Bed Frame or in the range of moving parts.		
	The Bed Frames may be misaligned. Follow the instructions in the section "Fixing Misalignment" to realign the Bed Frames.		

A WARNING

Moderate risk of death or serious injury to children

Operating the Power Converter or performing an Emergency Lowering using the Button on the Power Converter will override the Child Lock feature. This may lead to death or serious injury to children.

- Keep children away from moving parts
- Do not let children play with the Bed Frame

When an Emergency Lowering is performed, only the Bed Frame connected to the Power Converter will be operated. You will need to perform separate Emergency Lowerings for Bed Frames connected by Wireless Sync. Wireless Sync Mode will be activated again afterwards.

9. TECHNICAL DATA

PROPERTY	SPECIFICAT	SPECIFICATION			
Input Voltage	100-240 V	100-240 V			
Rated Input current	2.2 A				
Suitable mattress	King	Cal. King	Queen	Twin XL	
dimensions	76 x 80 in	72 x 84 in	60 x 80 in	38 x 80 in	
Ambient conditions	Indoor use o	Indoor use only			
Maximum load	1000 lbs eve	1000 lbs evenly distributed			



The permitted maximum load is dependent on input voltage. At the lower end of the input volt-age range, maximum load may be reduced. Contact us for further details.

10. FINAL DISPOSAL

Before disposing of the product, check the types of raw materials used in the Bed Frame and make plans to dispose of them accordingly.

This product should not be disposed of with regular household waste. Adhere to the disposal procedures for the raw materials and components used. Recycle as many parts as possible.

Careless or incorrect disposal may cause irreversible environmental harm. Ensure that measures are taken to protect nature, the environment, and the economy.

Dispose of all materials and parts according to local guidelines and regulations. Ensure that the disposal is lastingly compatible for humans and nature.